


## ann AR111

### instructions for use

1. Check mains connection, if disconnected.
2. Unscrew wall bracket off the glass-housing.
3. Unfasten module of the socket.
4. Conduct mains cable through cable entry point of the wall-bracket.
5. Attach wall bracket. Pay attention of position "top".  
Use the washer gaskets with rubberized face showing to the wall bracket. At mounting holes which are not used arrange for density.
6. Hustle silicone-tubes over the power lines.
7. Establish protective conductor connection and conduct electrical junction.
8. Remount module of the socket.
9. Insert light bulb and connect it.
10. Hustle glass-housing onto the wall-bracket and assure it with countersunk head screws..

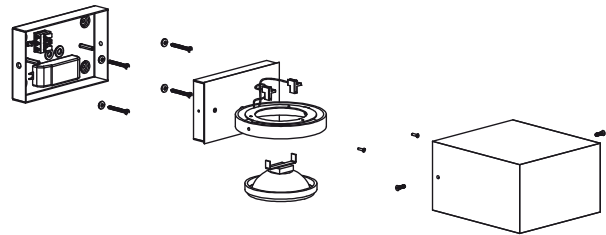

#### light technology:

low-voltage halogen lamp  
QR111  
50W/G53


 EEC


#### technical information:

operating voltage 230V / 50Hz

 protection class

 safety class 1

 Luminaire is suitable for mounting on normal inflammable fixing surfaces.

 conformity mark

#### relamping and maintenance:

Disconnect the electrical installation.

Change lamp. Check the gaskets and if necessary clean or replace it.

Take notice of care-instructions when cleaning the luminaire.

For cleaning do not use a high pressure cleaner.

#### care:

Regularly clean luminaire from dirt and deposits.

See service documents:

Care of stainless steel rustless.

#### safety:

We point out that the electric connection of light fixtures has to be done by a certified installer.

We assume no accountability for damages which are a result of non-appropriate mounting or application of the luminaire.

Modifications on the luminaire will result in loss of warranty.

**Attention:** Please note that some parts of this luminaire can produce temperatures higher than 90°C when it is in operation. To prevent burns, please avoid any contact!

**Please keep the instructions with the service documents!**