


# master/slave


## installation instruction

1

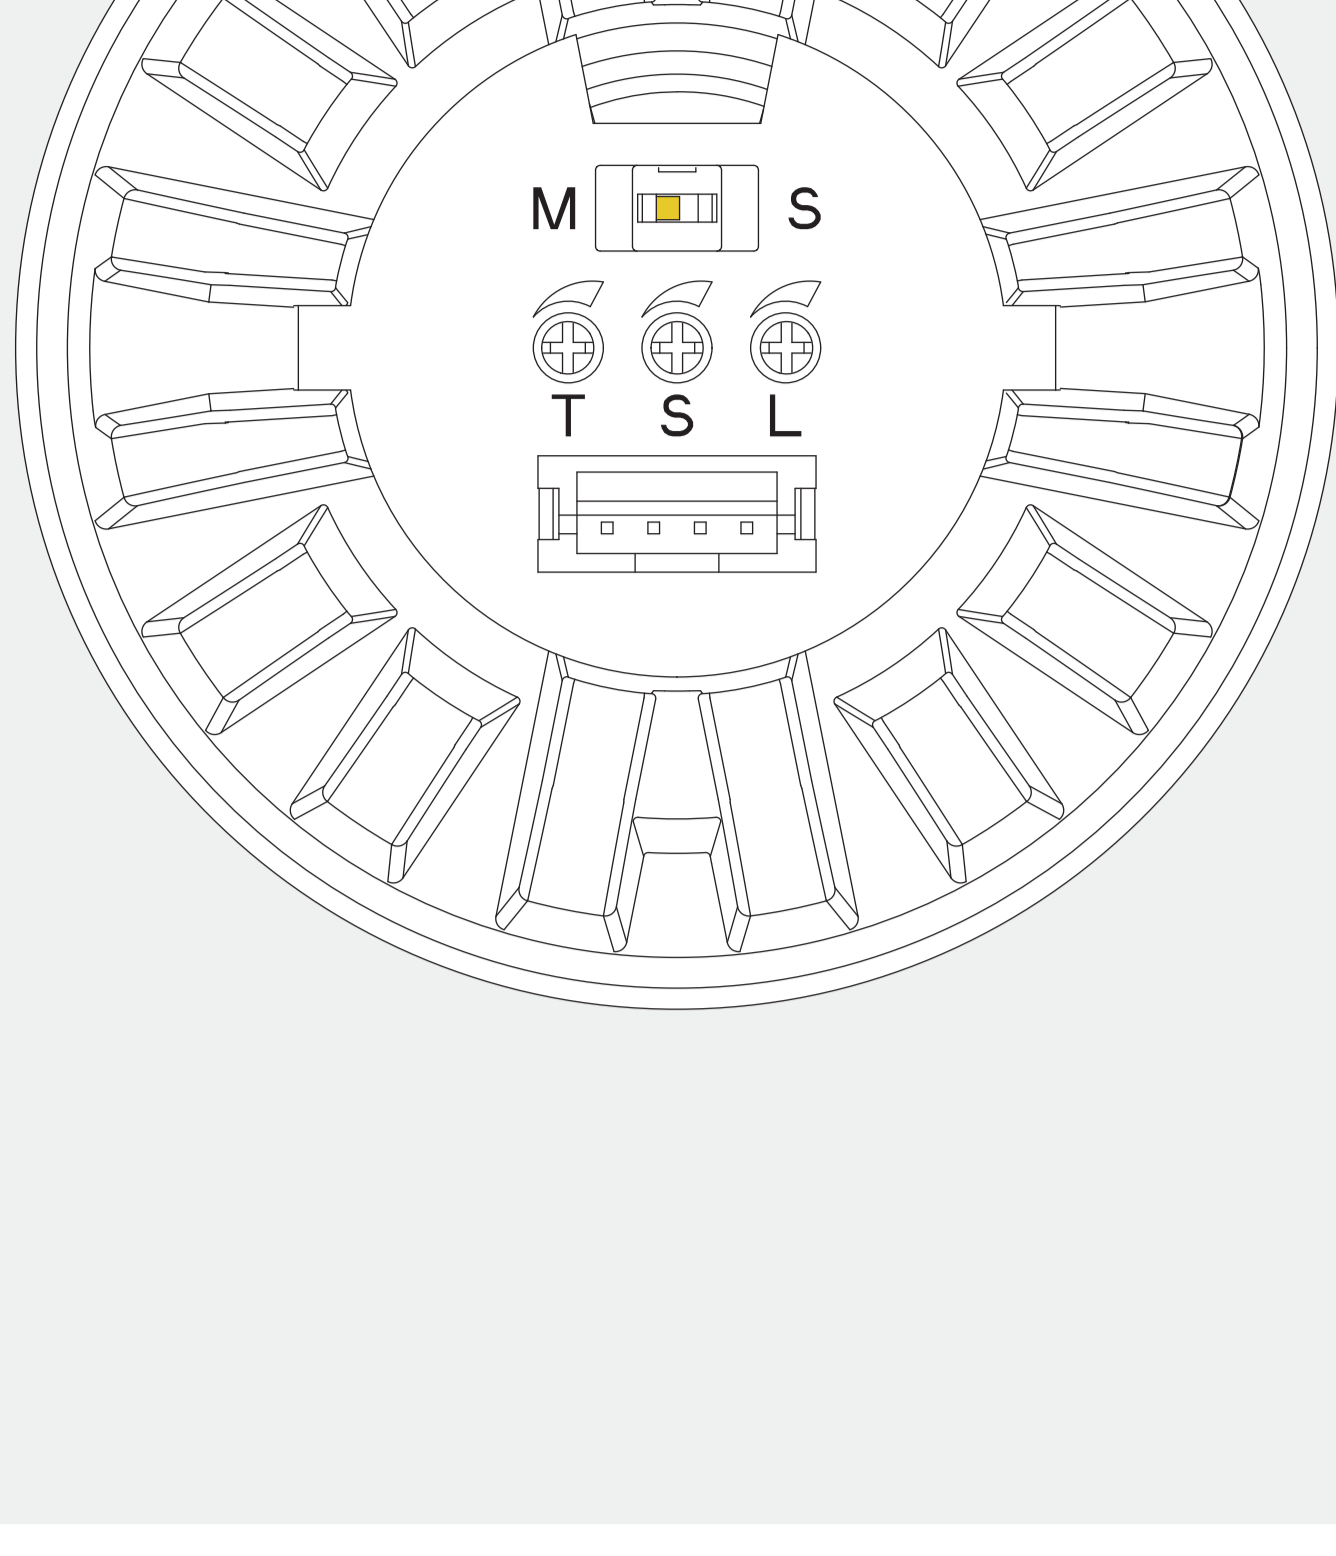


set the luminaire in master or slave mode with the switch (1 = master - rest = slave)

2

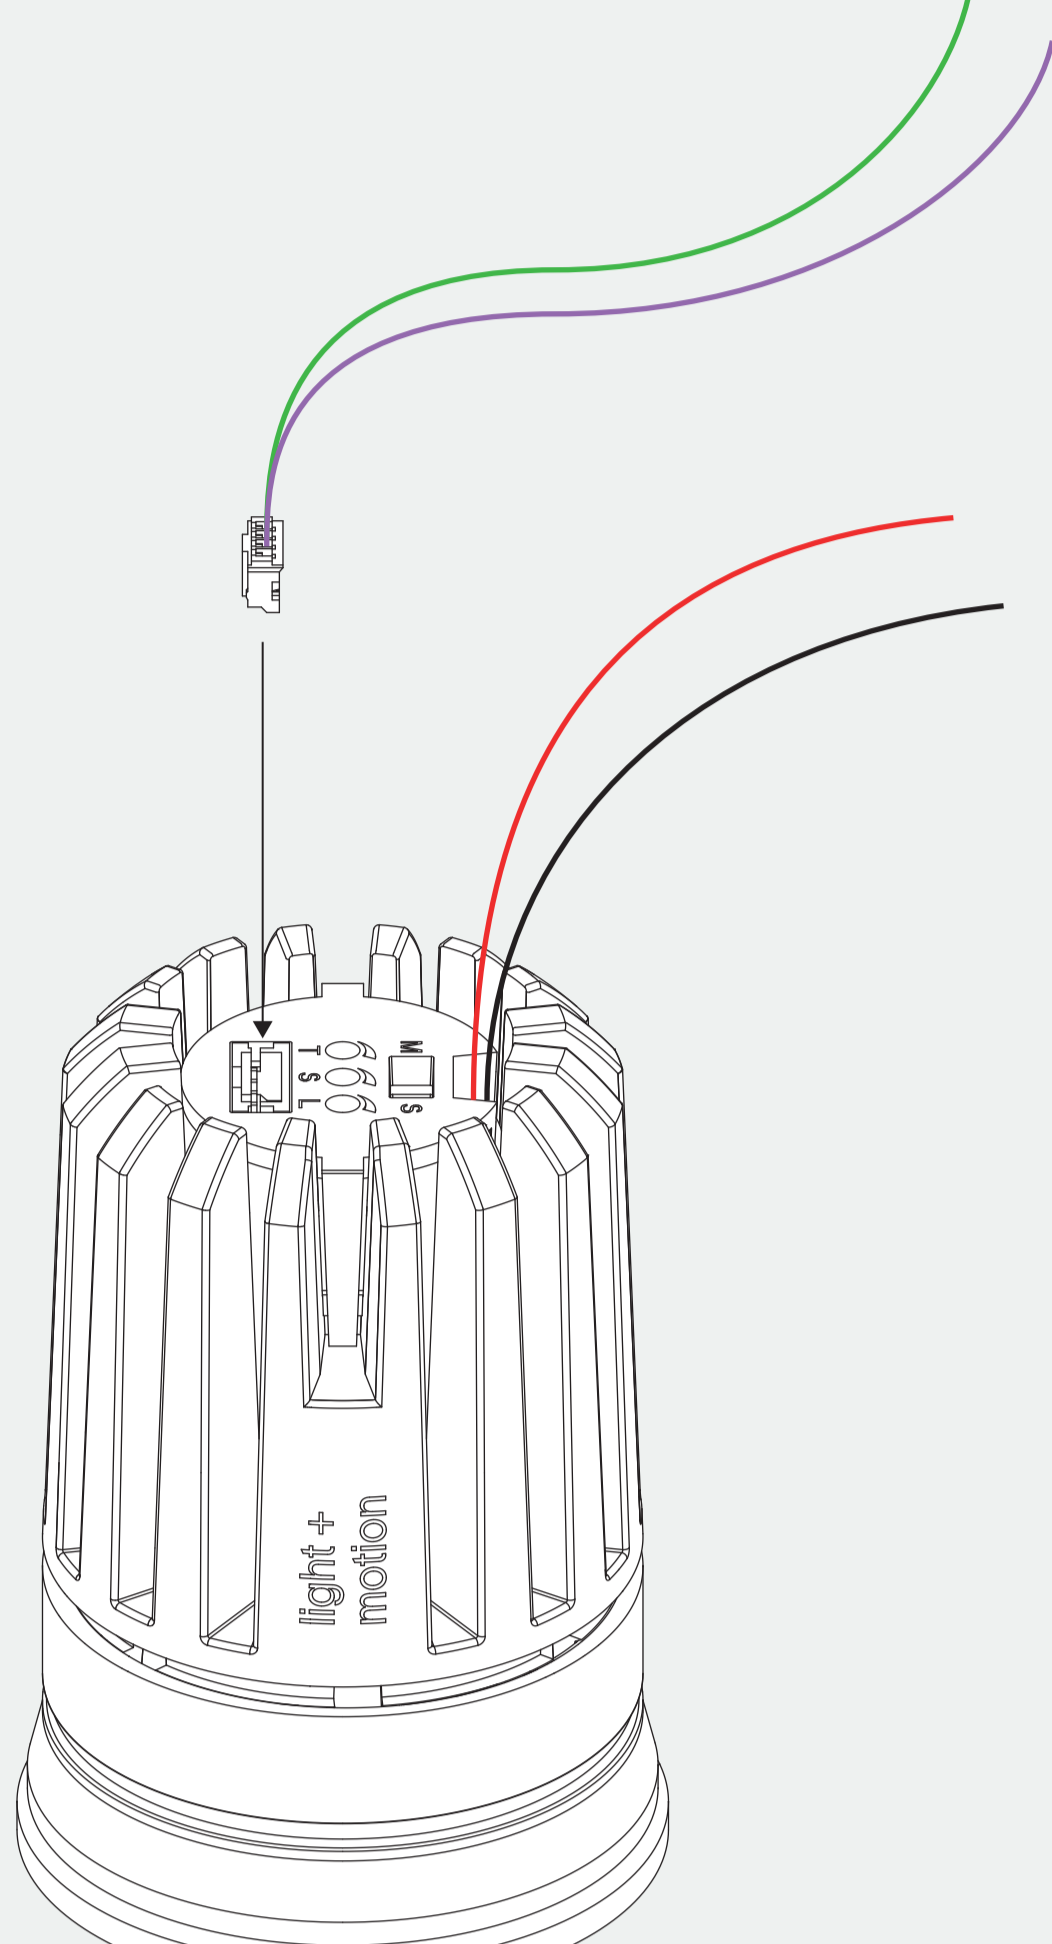

set the luminaire in master or slave mode with the switch

3

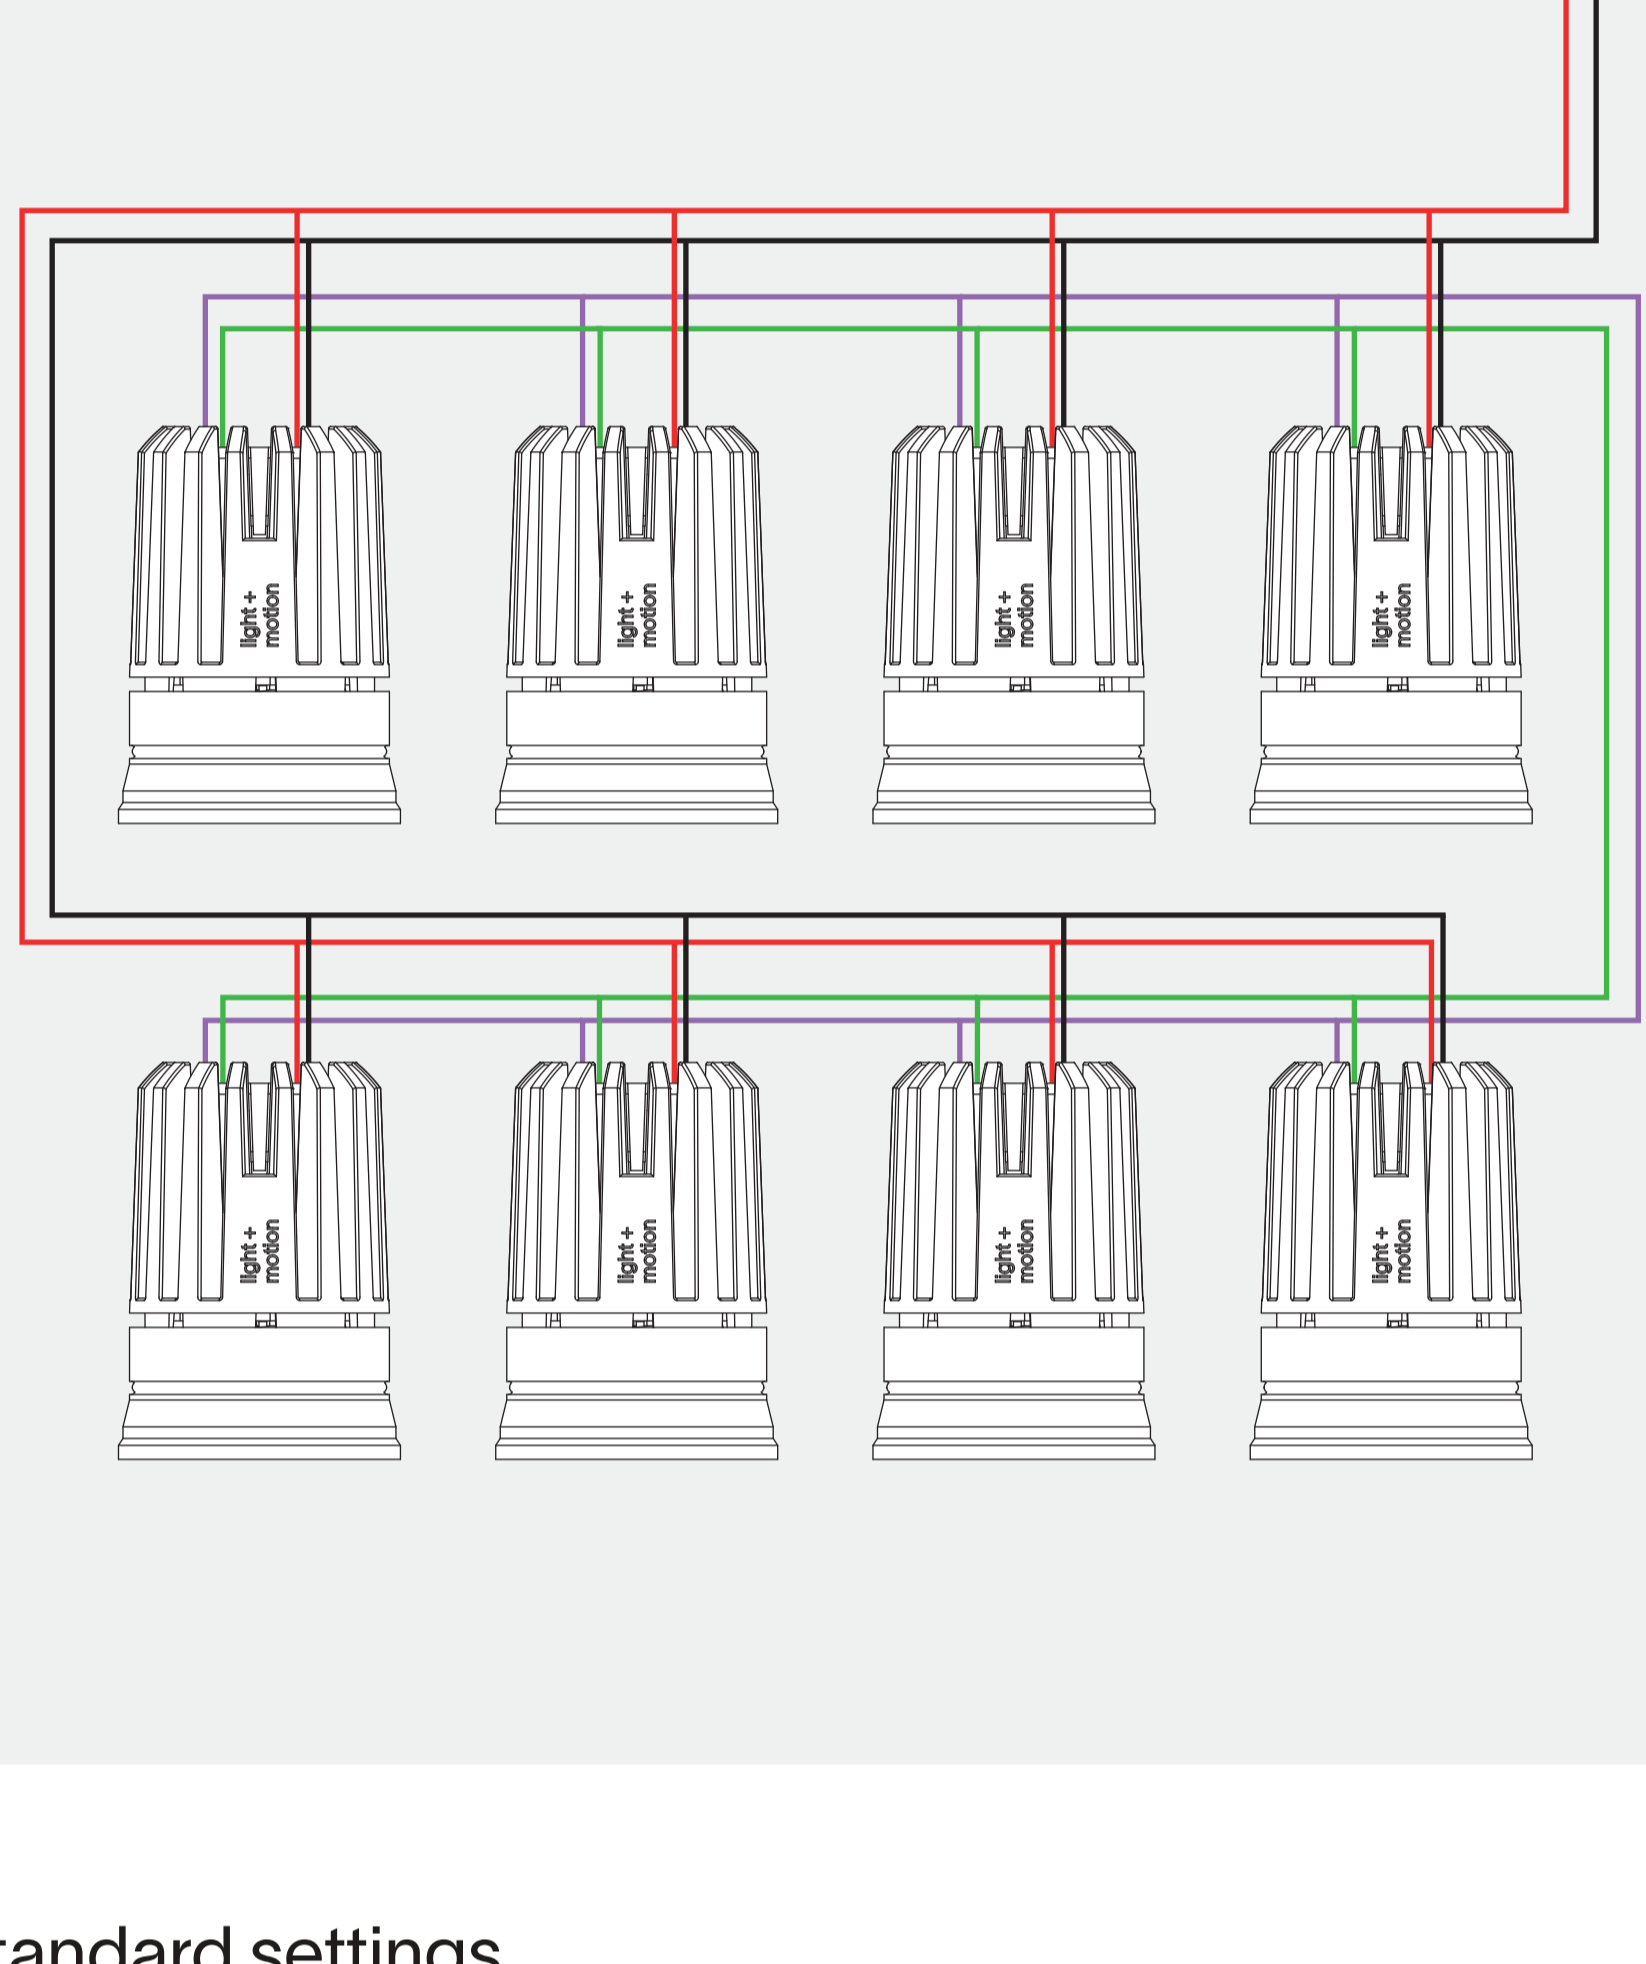

standard settings

- ambient light: 1700 LSB
- sensitivity: no pets detectable
- time on: 5min

if desired update standard settings with a screwdriver

<p>T = short time on S = low sensitivity L = low ambient light</p>	<p>T = long time on S = high sensitivity L = high ambient light</p>
--	---