

acrobat installation instruction

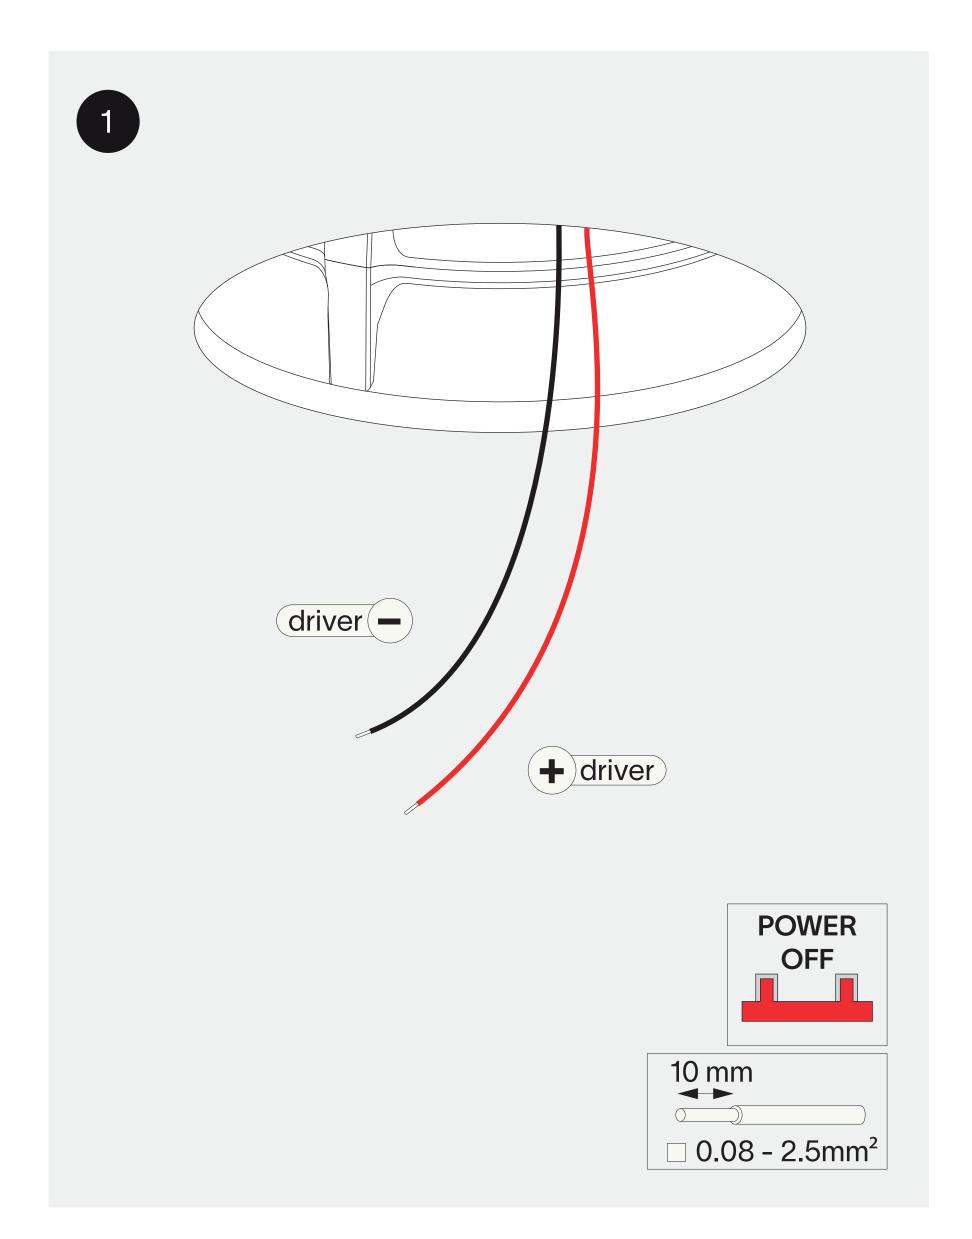


| constant current (mA) | typical forward voltage (V) | typical power (W) |
|--------------------------|--------------------------------|----------------------|
| 350 | 16,9 | 5,9 |
| 500 | 17,4 | 8,7 |
| 700 | 18,2 | 12,7 |
| 850 | 18,5 | 15,7 |

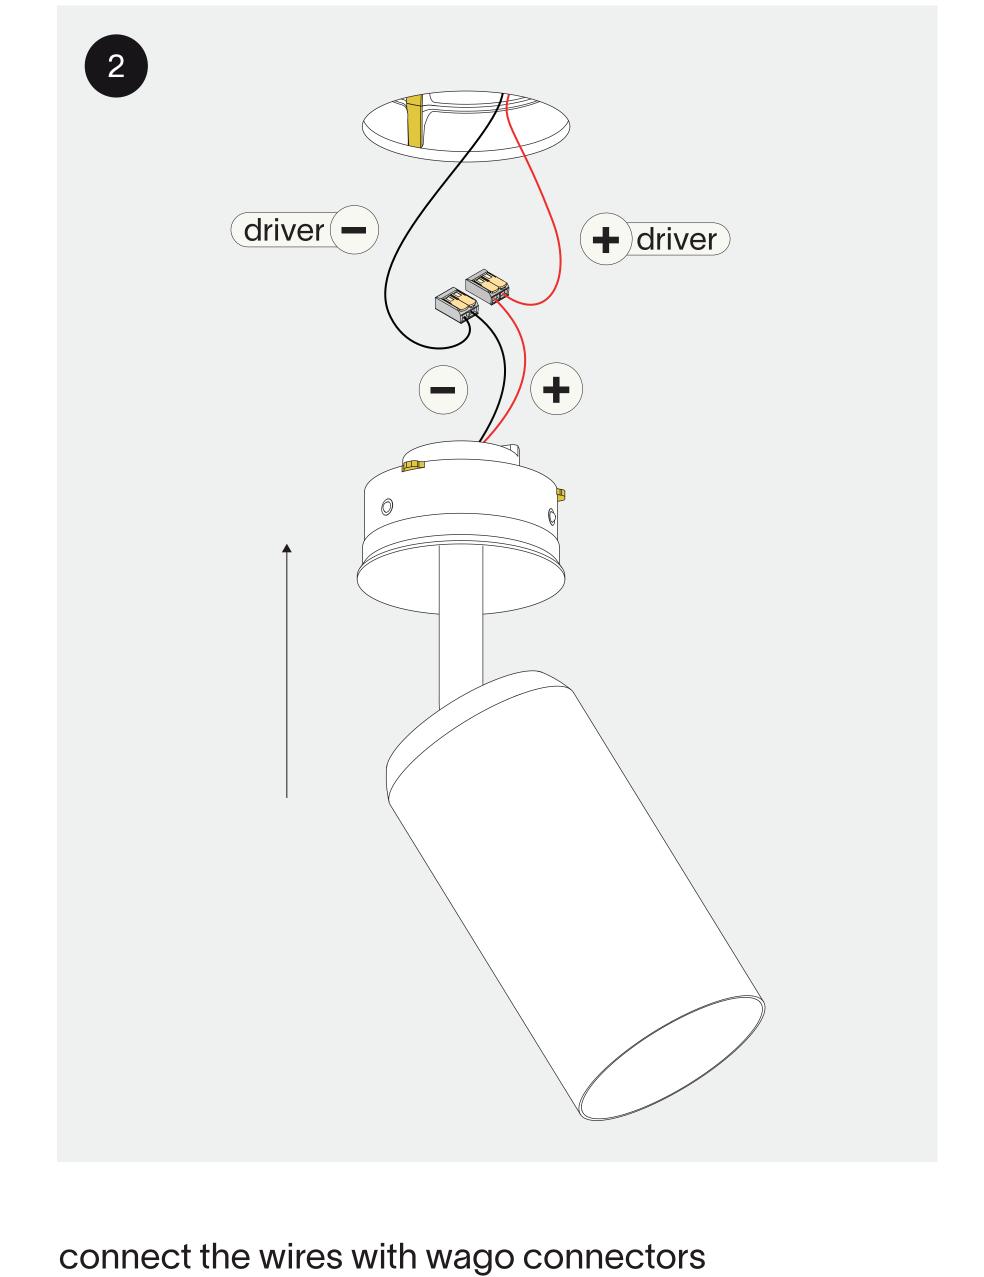


3

for serial connection, respect polarity

combine with a prado LED-driver

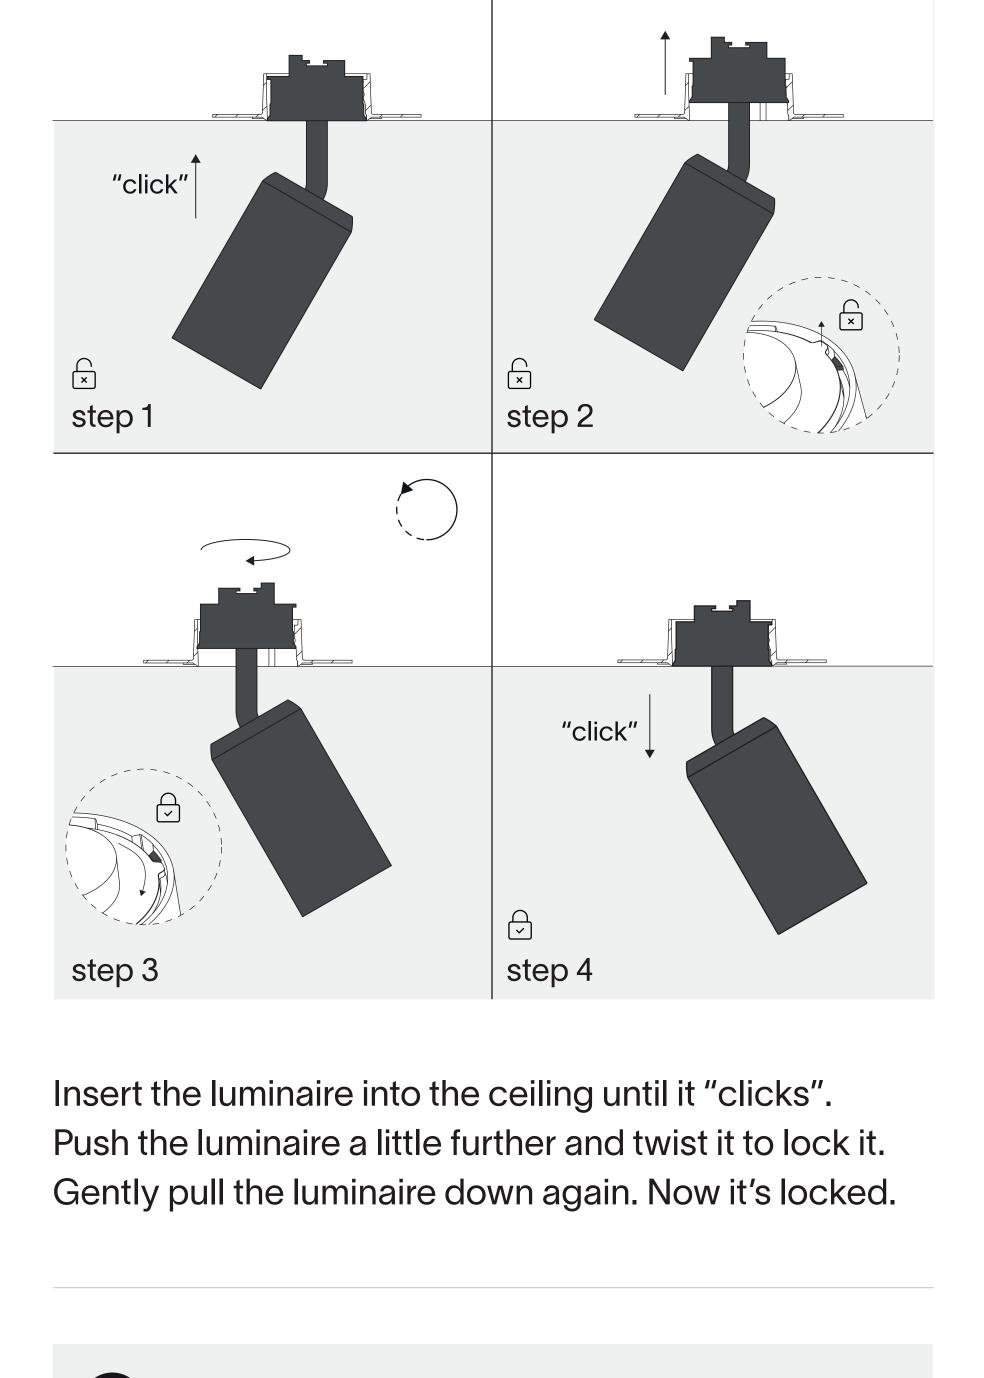

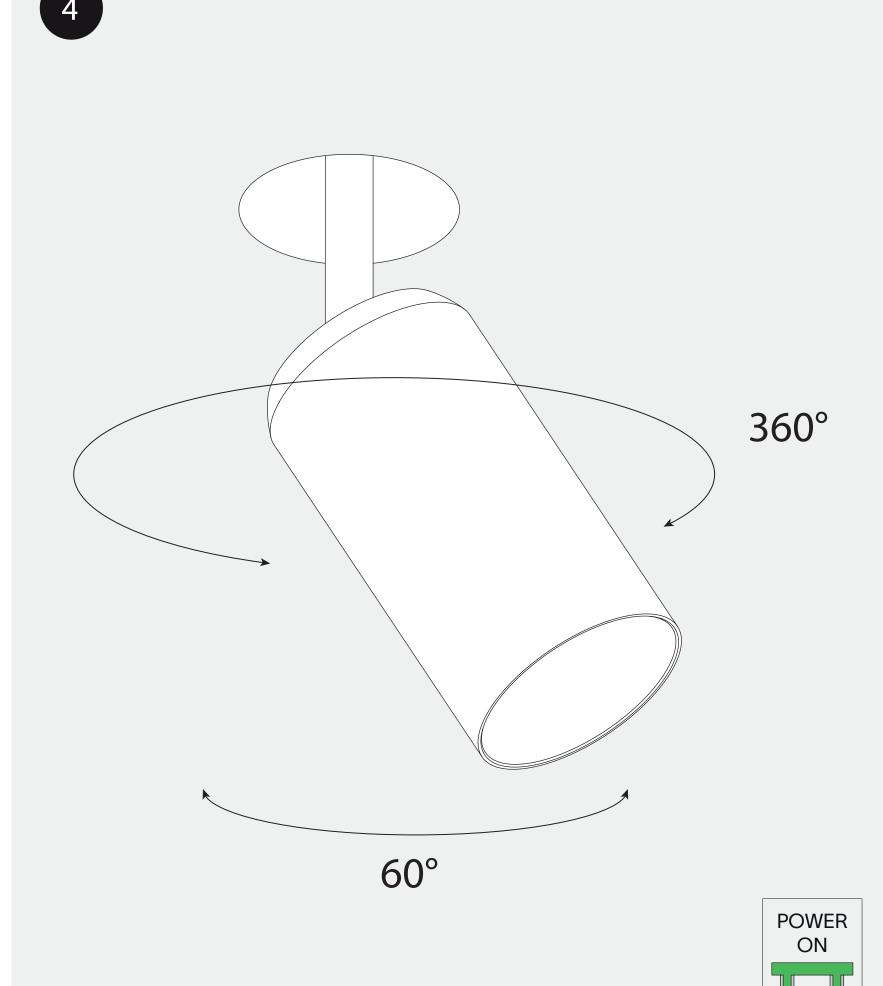

twist the luminaire as desired

thank you for choosing prado



prado.eu

The light source in this luminaire shall only be replaced by the manufacturer or a similar qualified person. Warranty will not apply in case of wrongful use or if unskilled personnel attempts to repair the product.