


trim spot mini

installation instruction


1

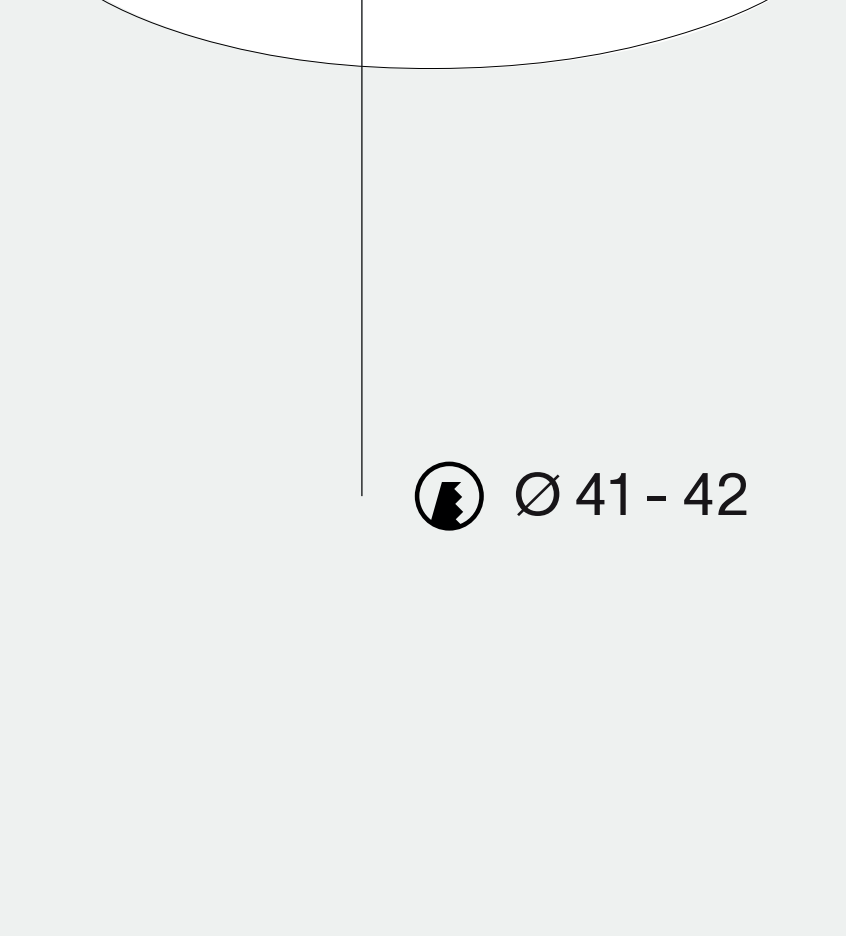

Ø 41 - 42

Cut a round hole (Ø 41). Consult the chosen luminaire tech specs for required height and free air dimensions.

2

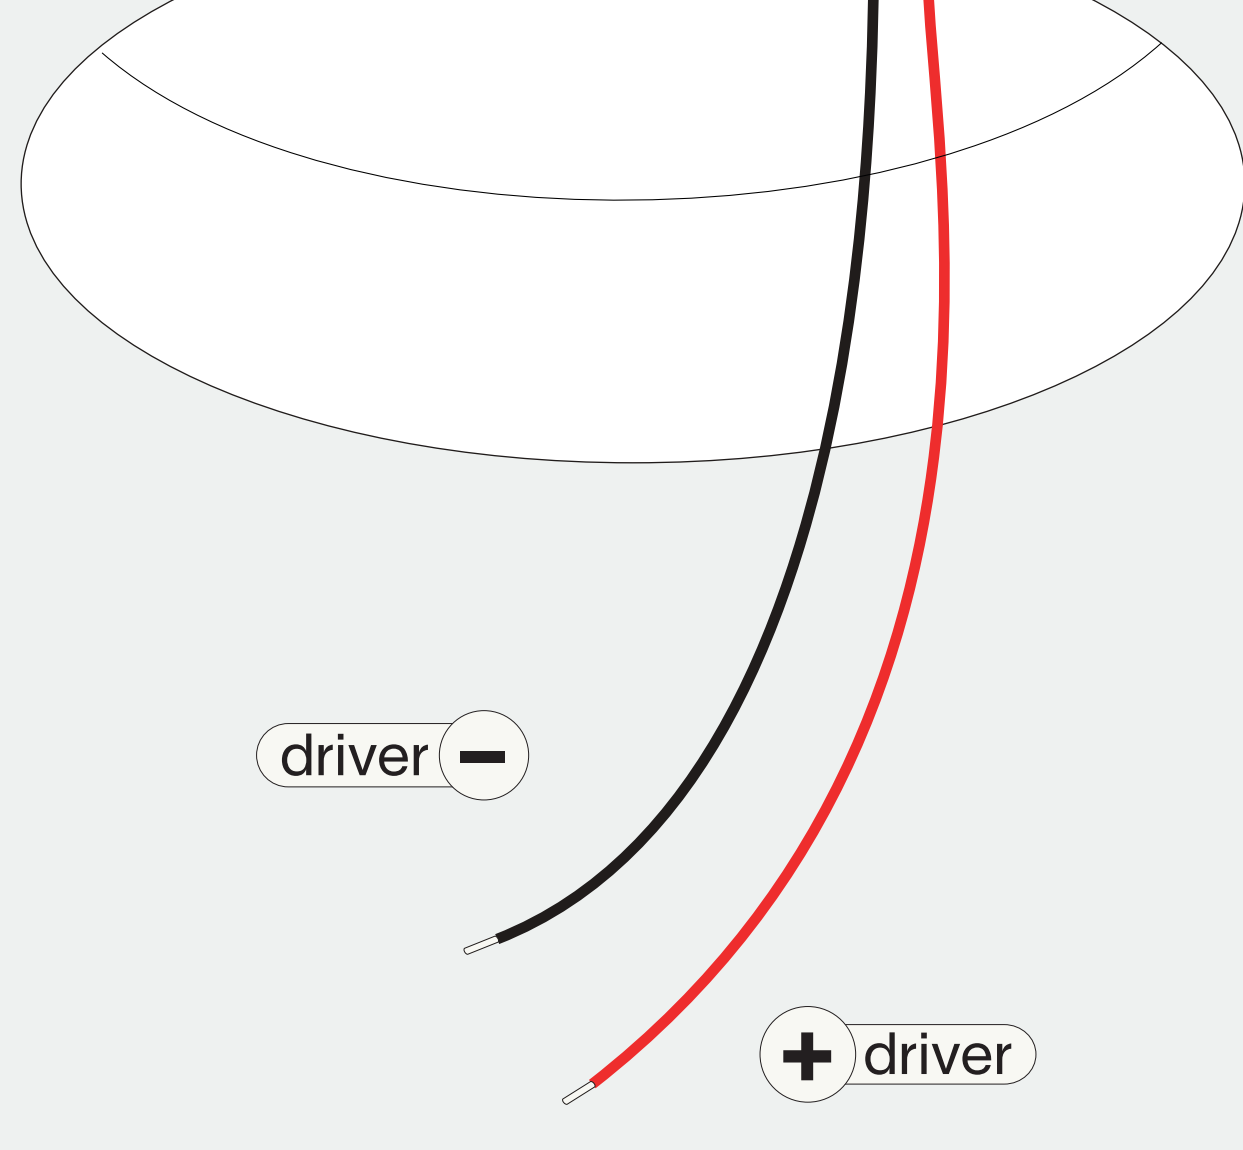

POWER OFF

10 mm

0.08 - 2.5mm²

constant current (mA)

typical forward voltage (V)

typical power (W)

350

16,9

5,9

500


17,4

8,7

trim spot mini short: max 350mA

trim spot mini long: max 500mA


3

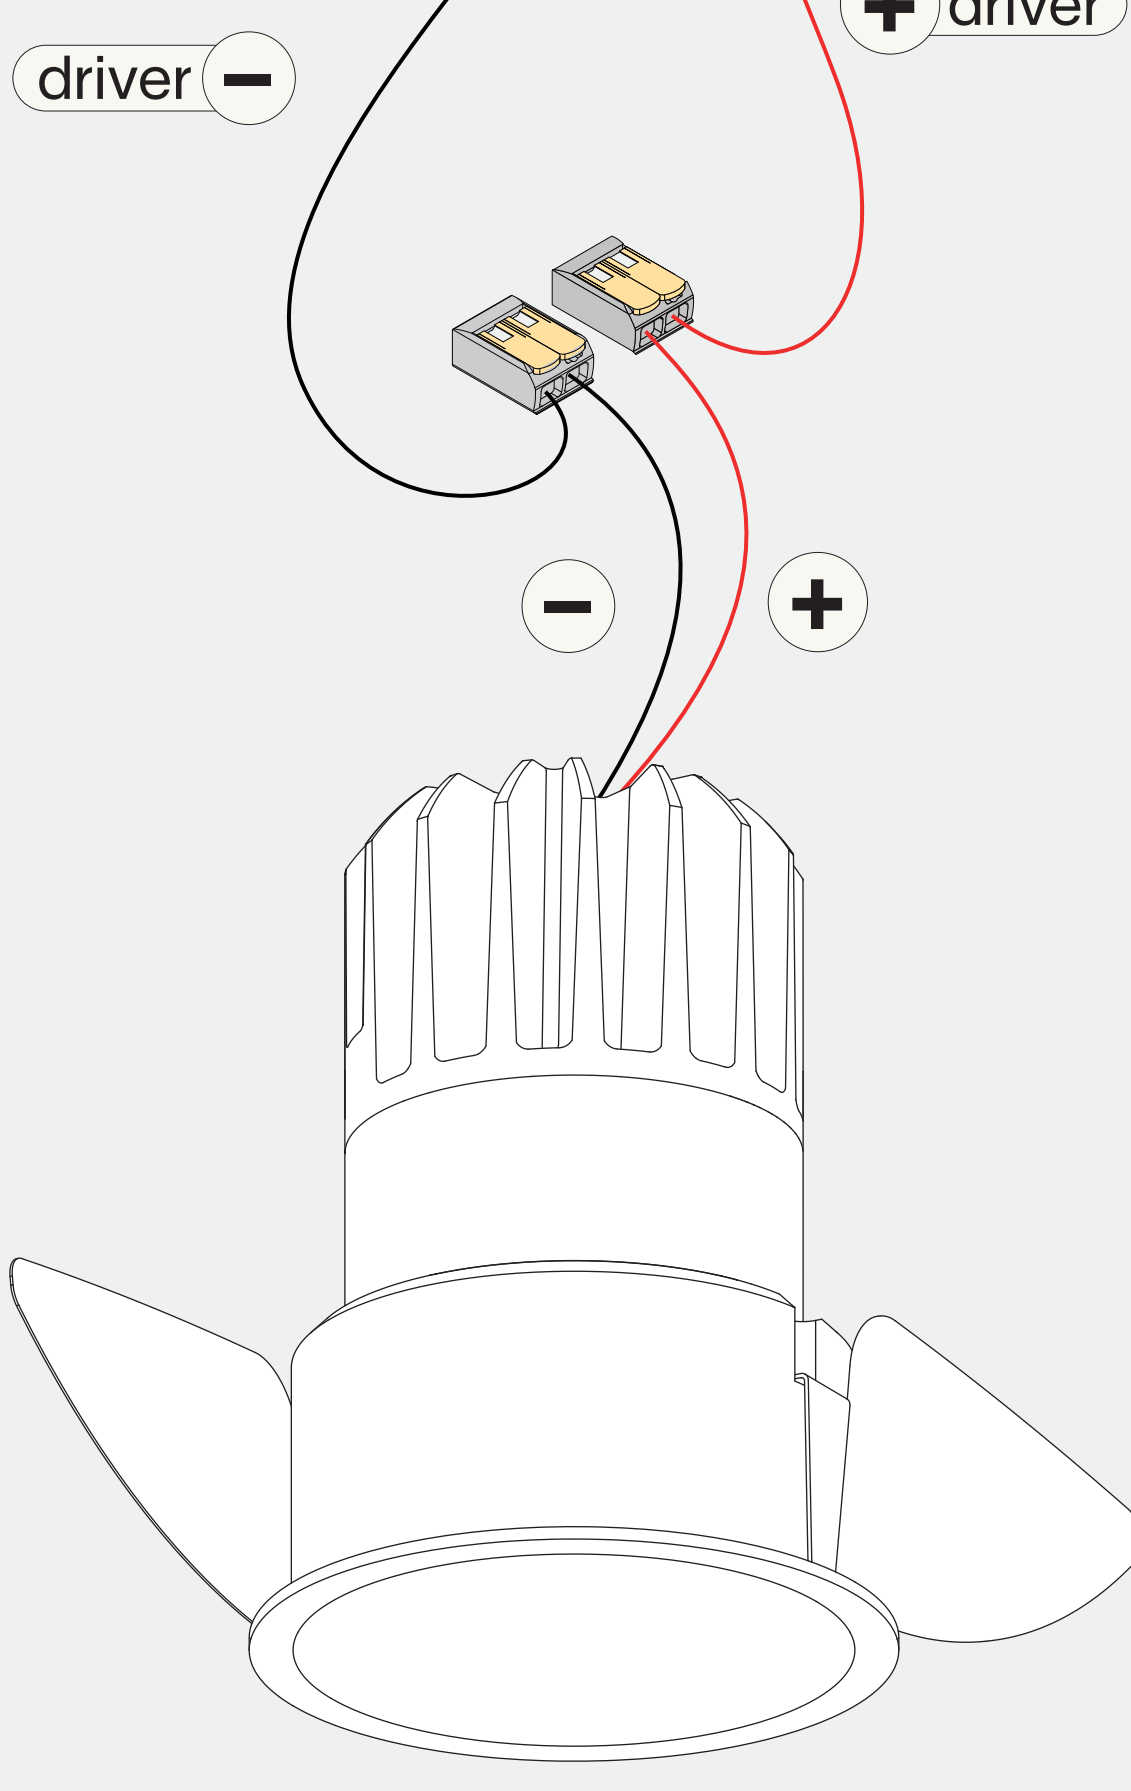

connect the wires with wago connectors for serial connection, respect polarity


combine with a prado LED-driver

4

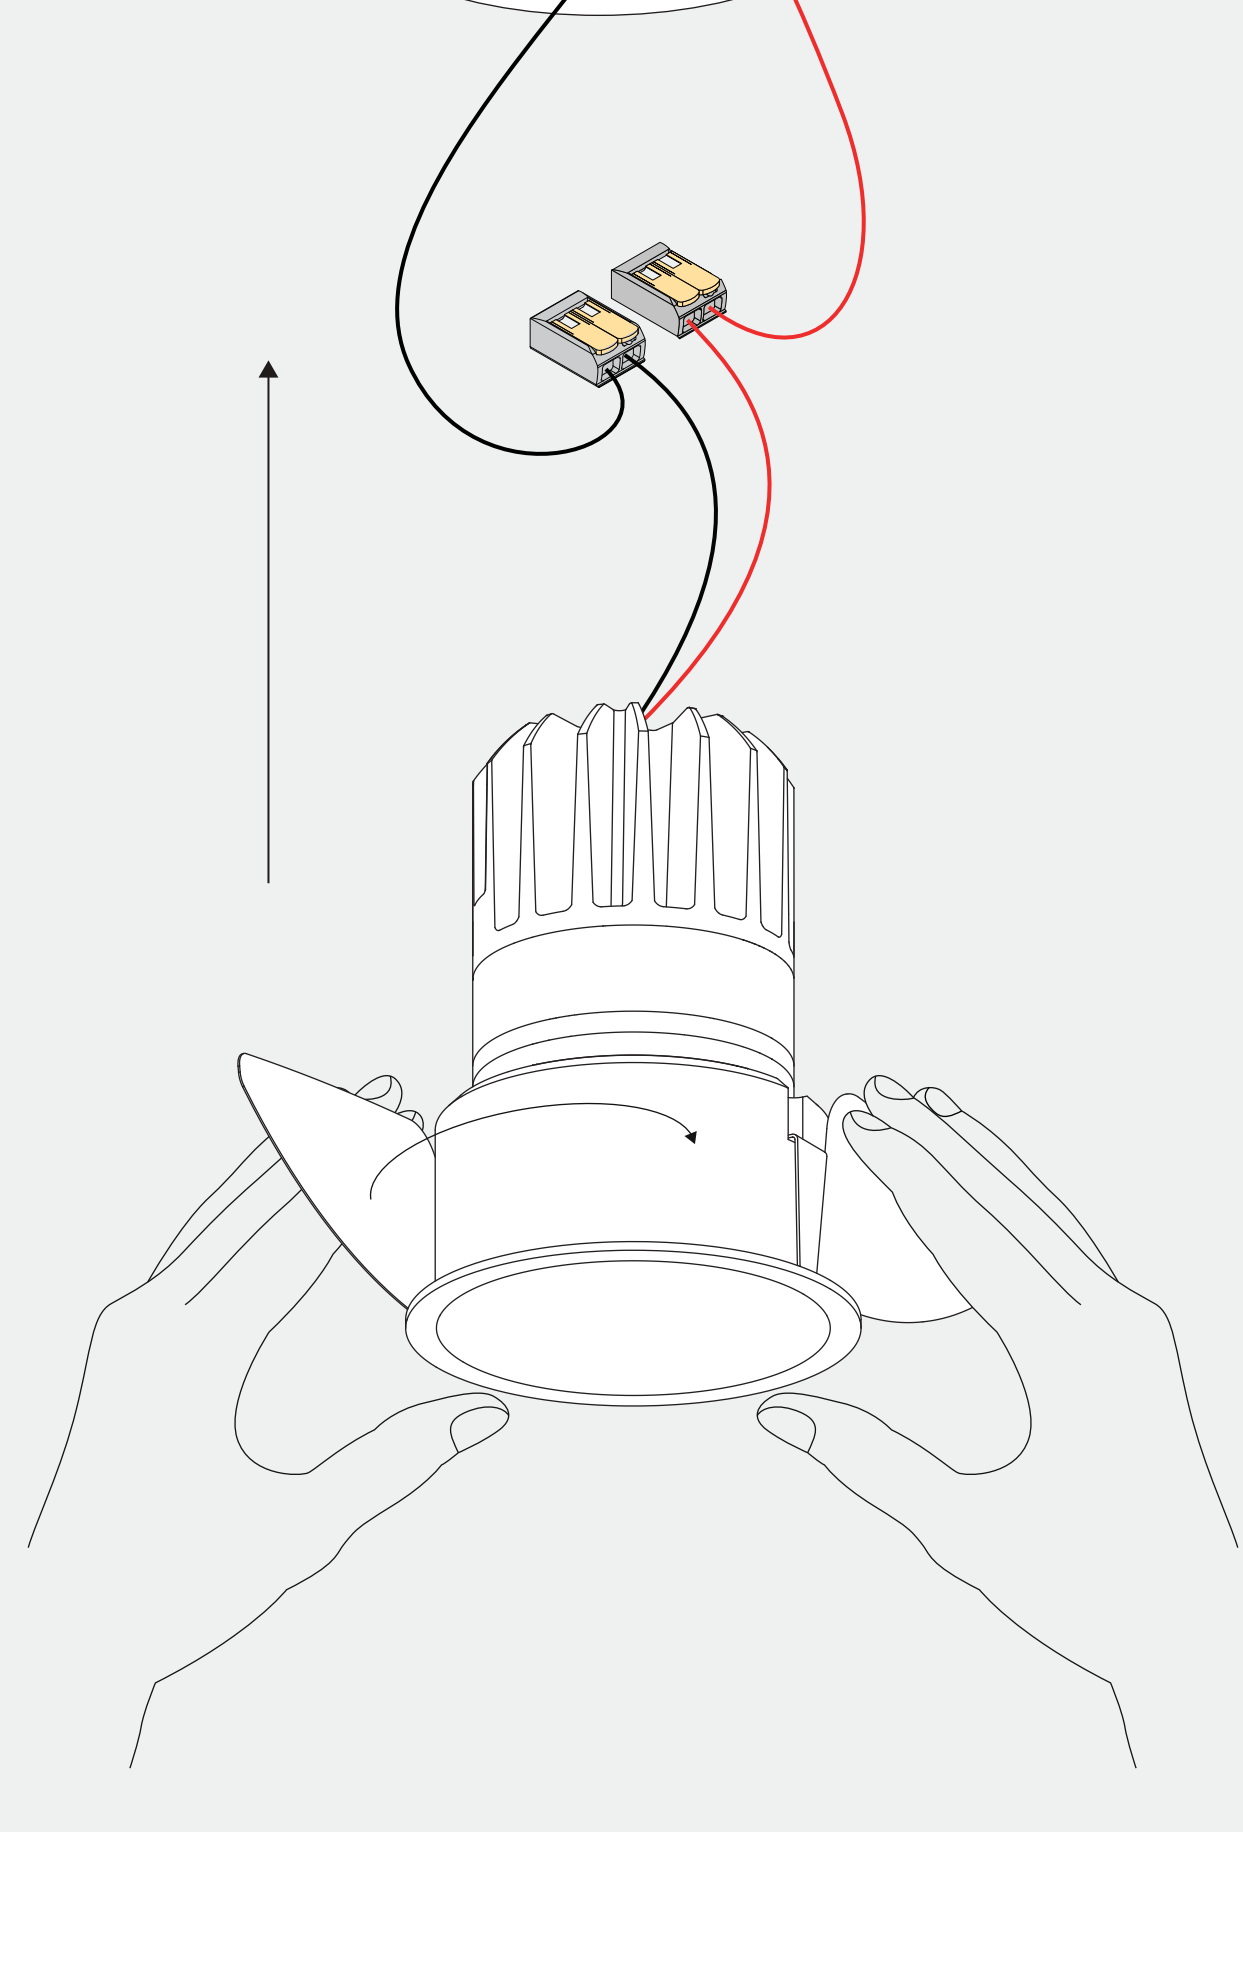


bend over the springs and push the luminaire into the ceiling

5

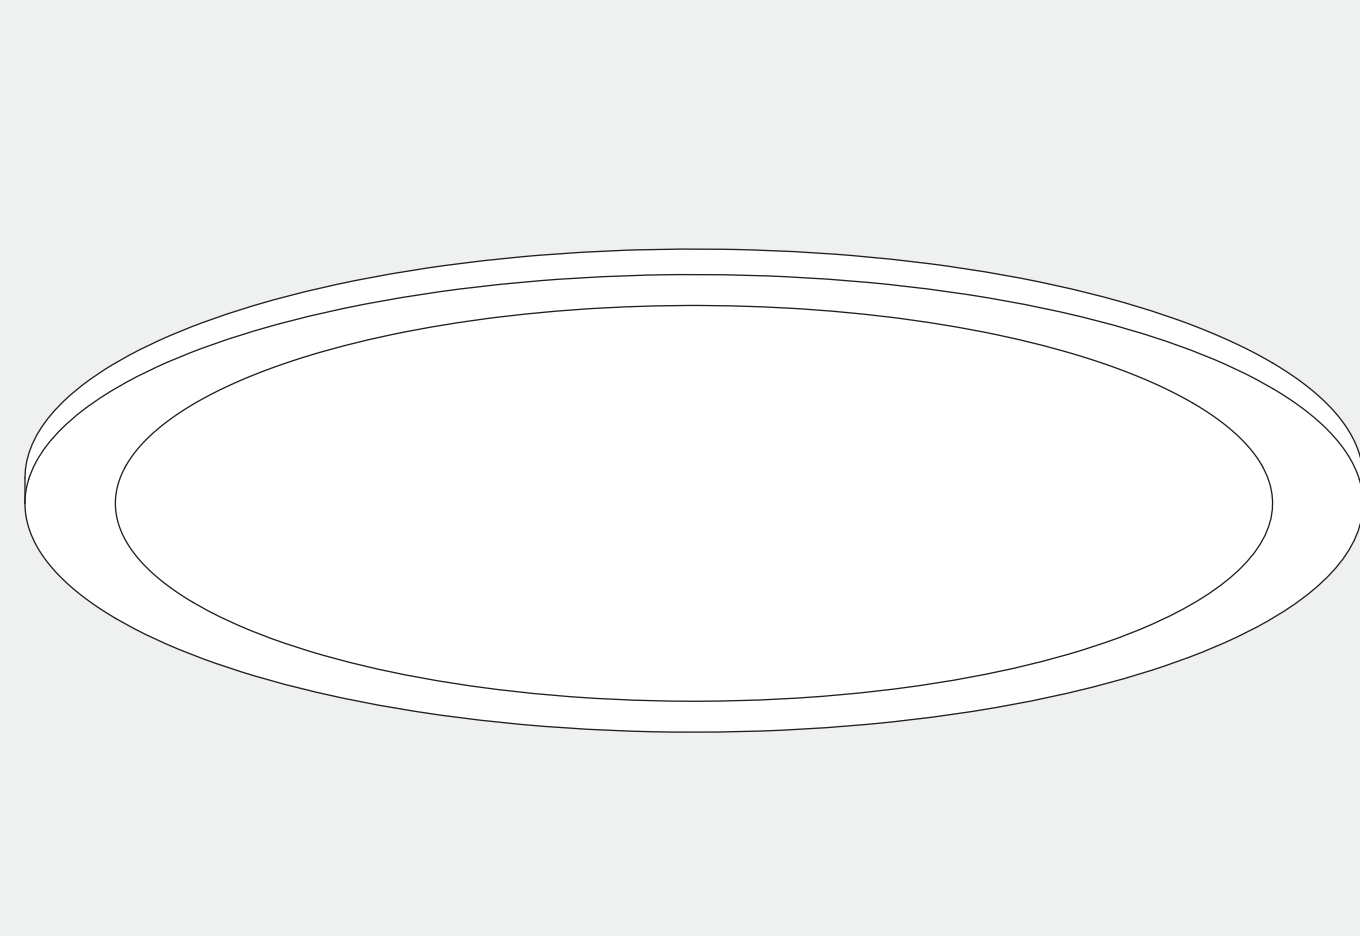

POWER ON

recommended free air dimensions

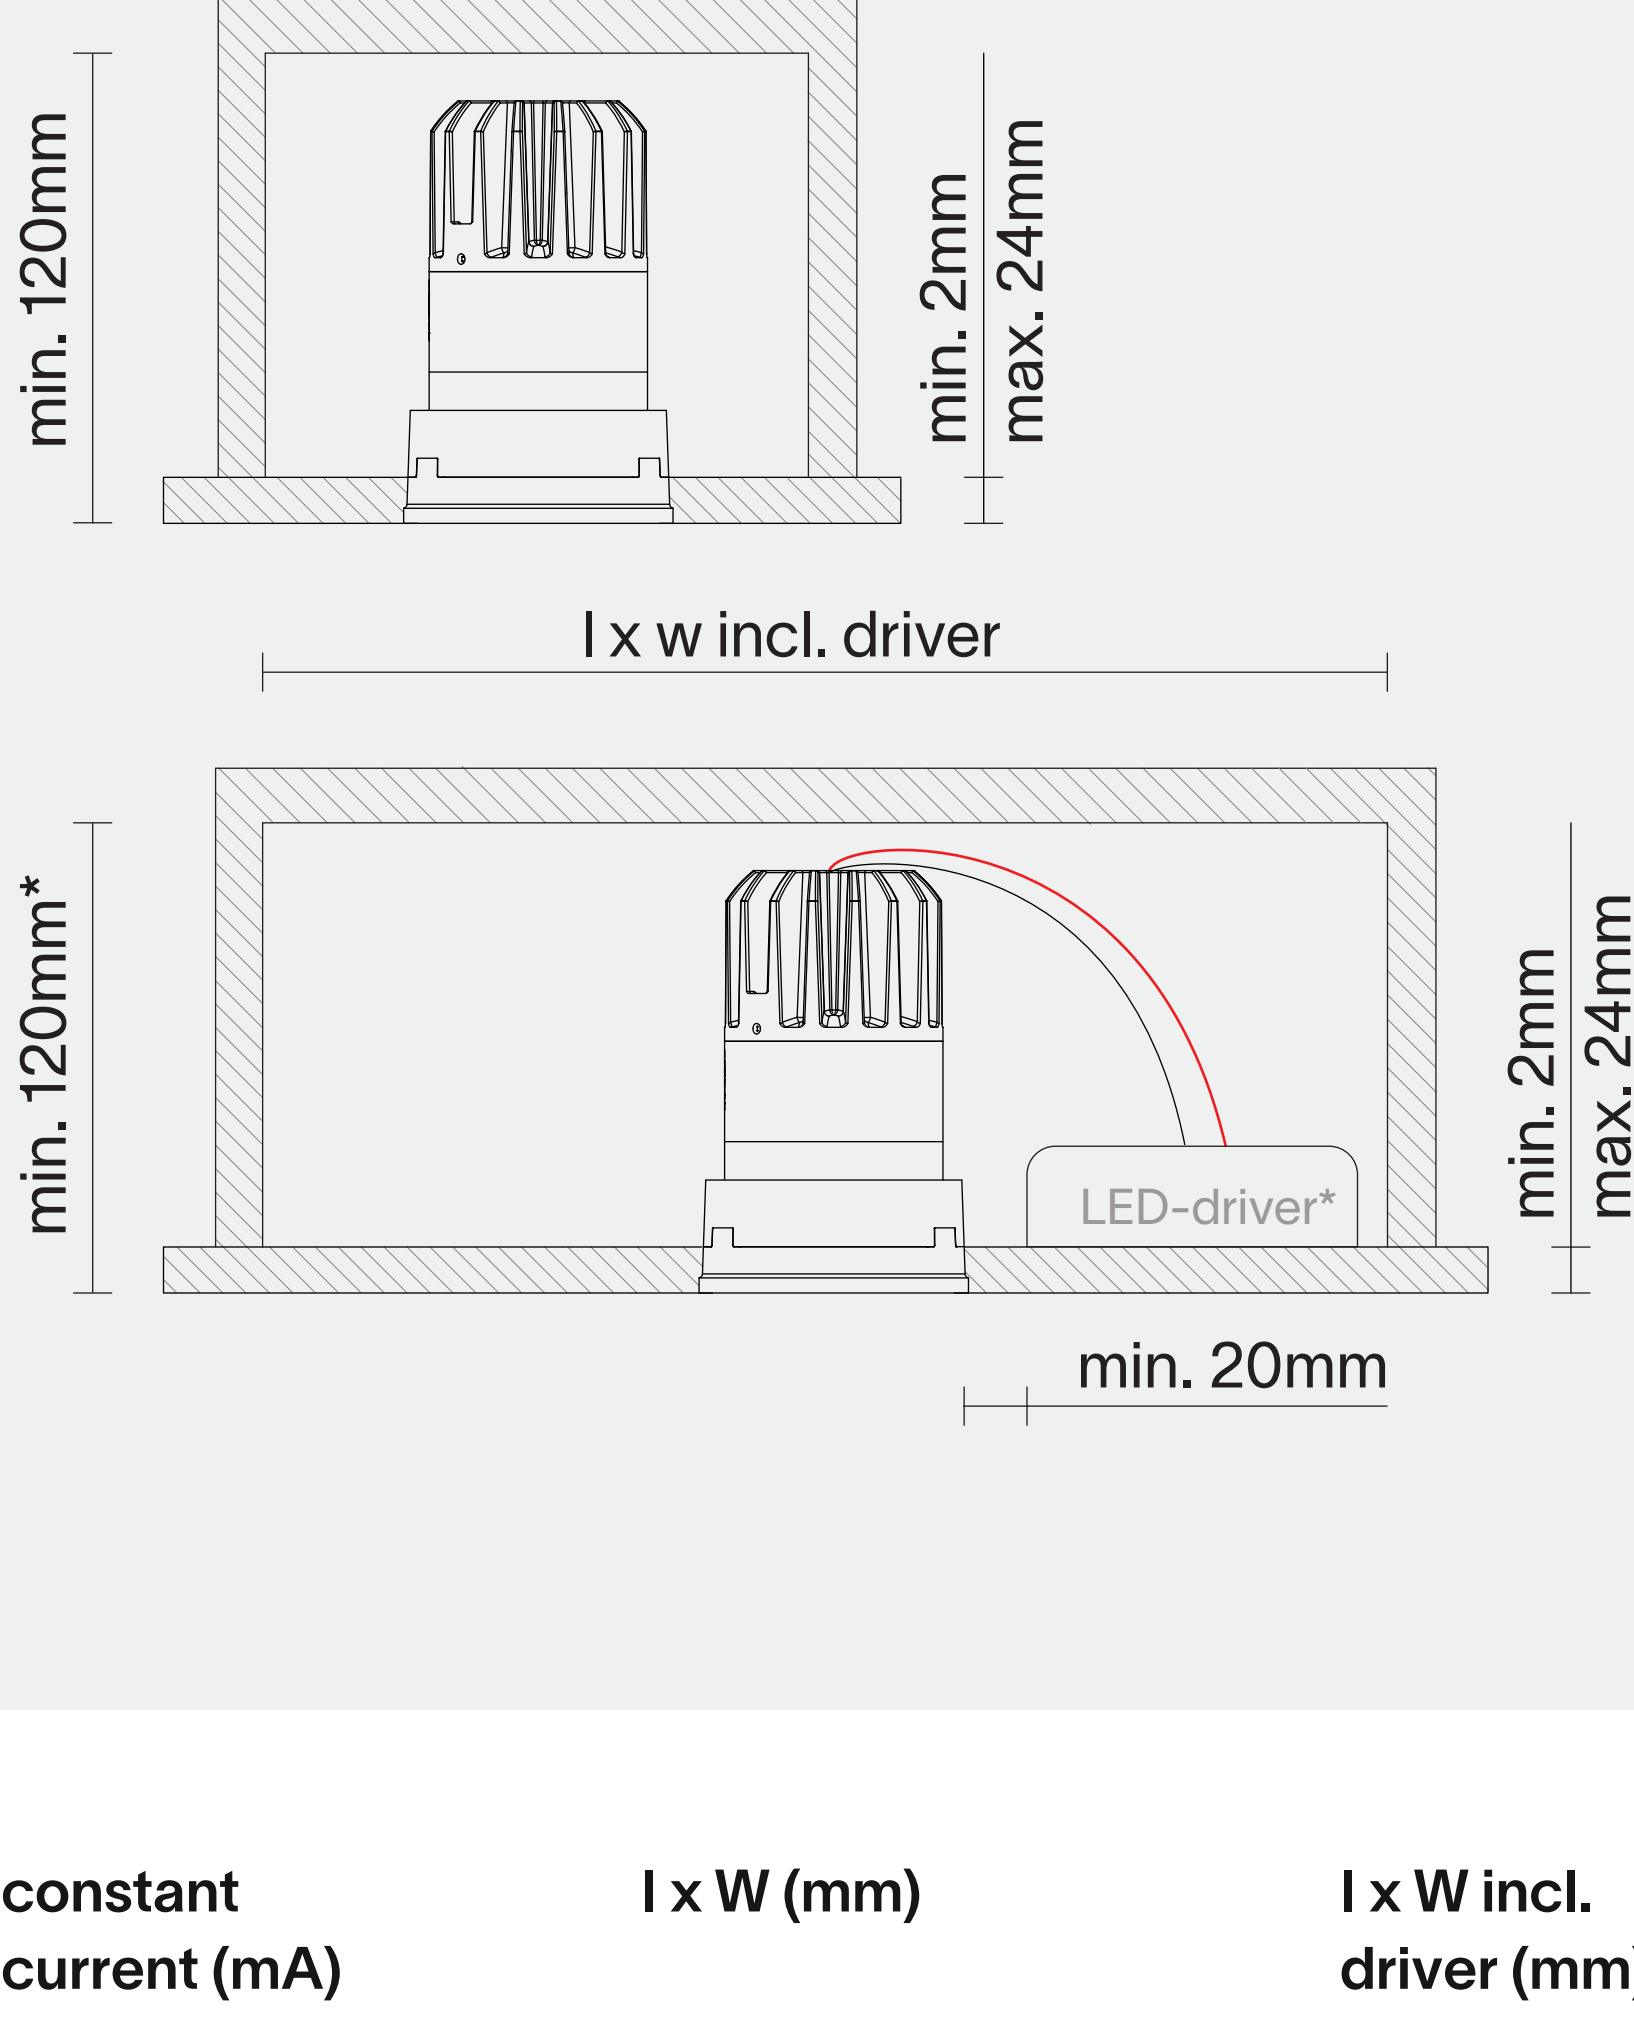

constant current (mA)

l x W (mm)

l x W incl. driver (mm)

350

100 x 100

200 x 200

500

150 x 150

250 x 250

thank you for choosing prado

Replace glass lens when broken.
Luminaire shall only be used together with glass lens.