


trimless spot

installation instruction


1

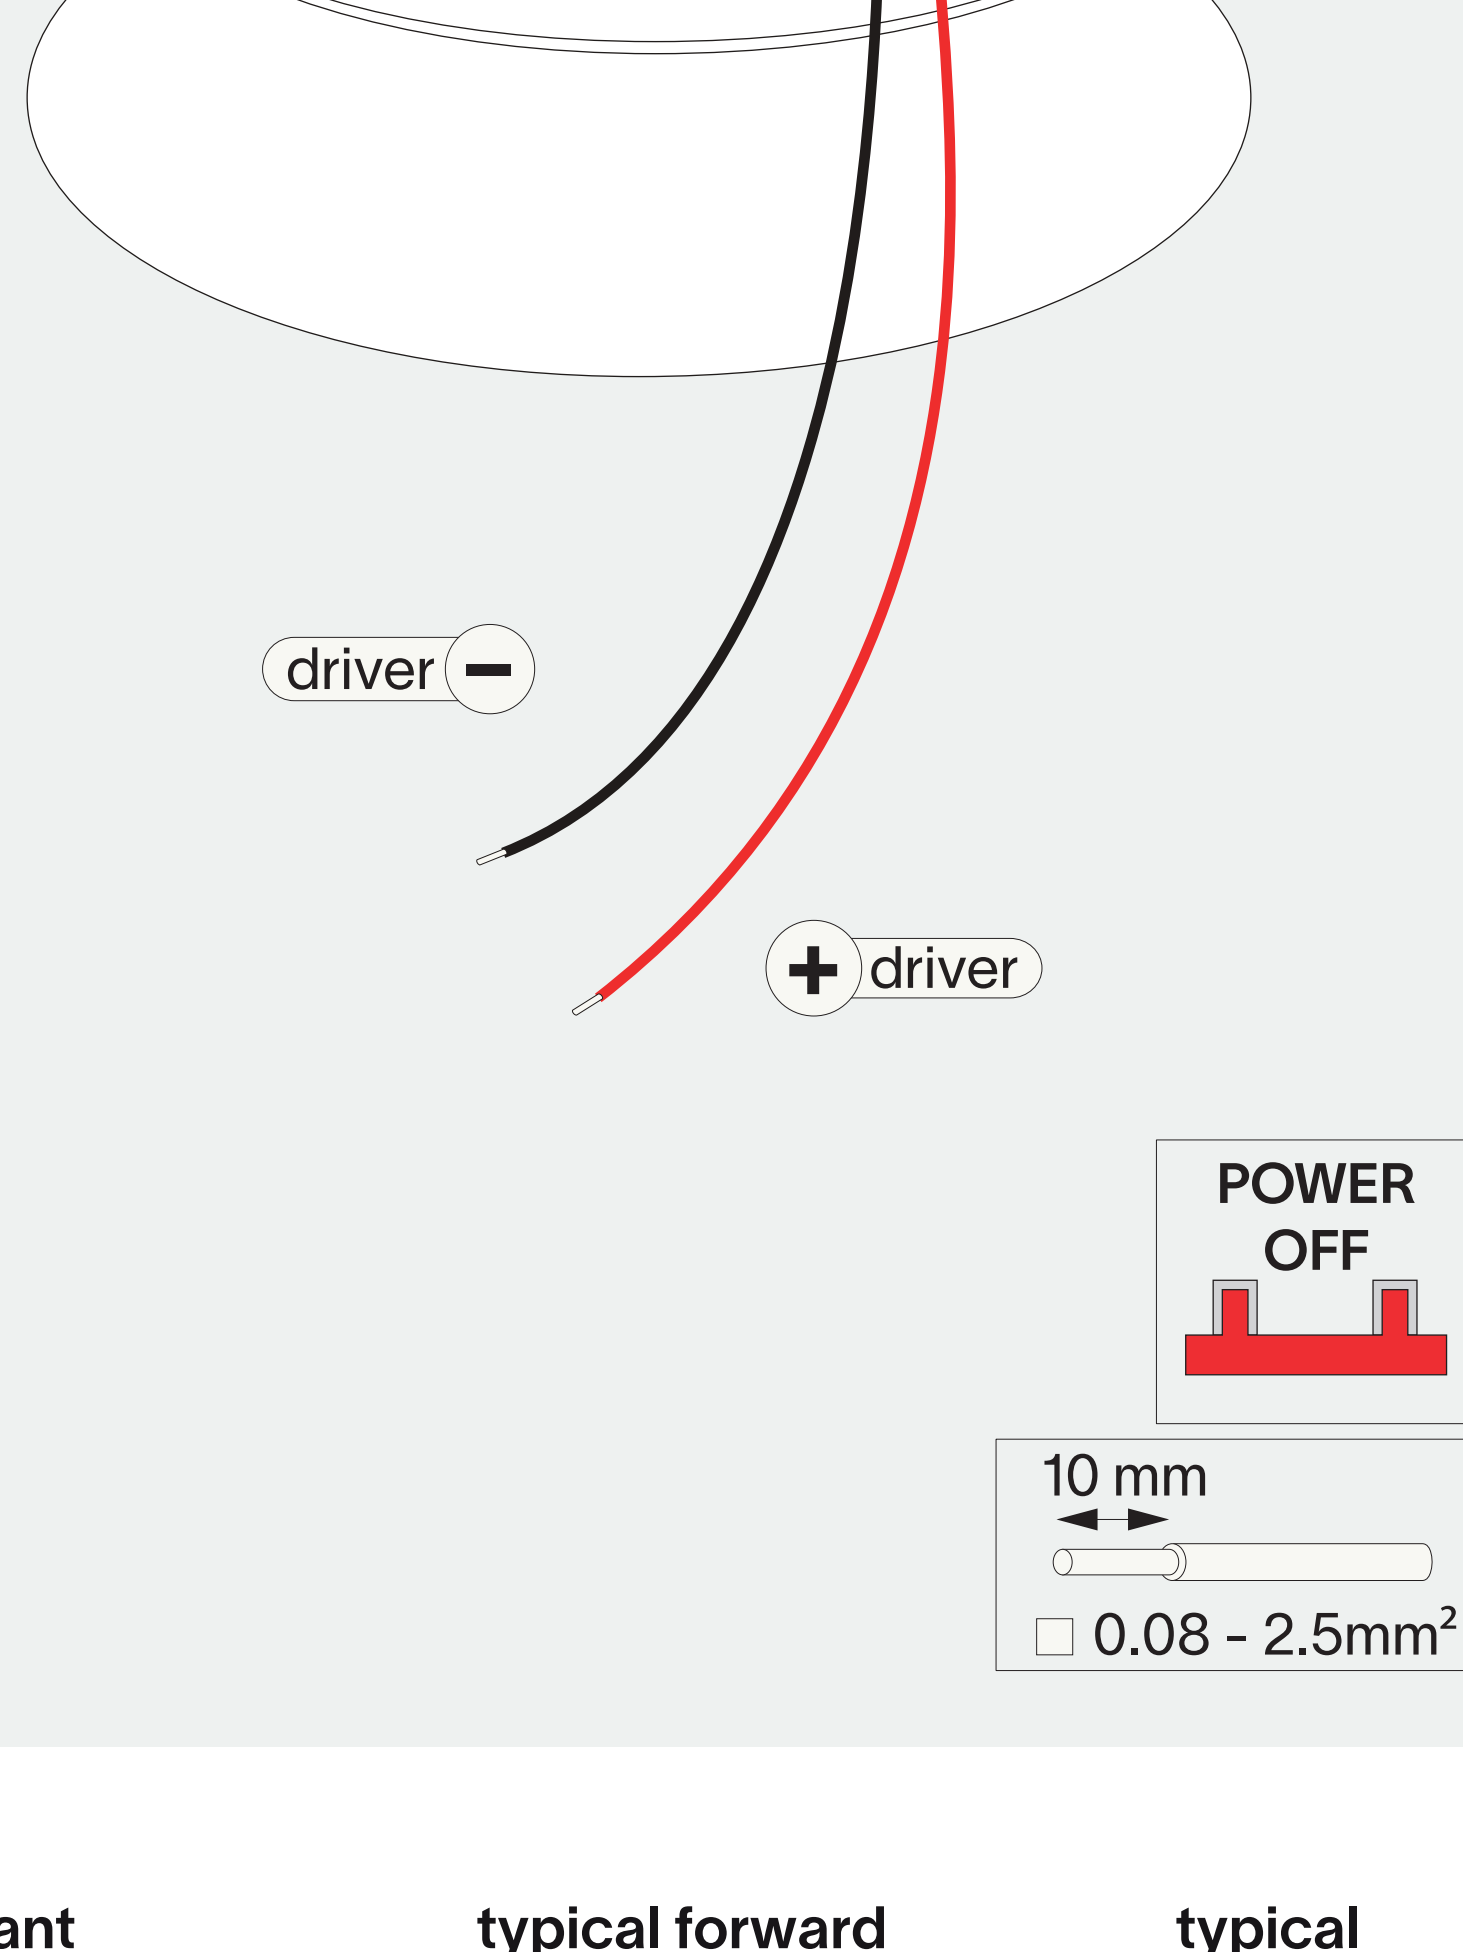

| constant current (mA) | typical forward voltage (V) | typical power (W) |
|-----------------------|-----------------------------|-------------------|
| 350 | 16,9 | 5,9 |
| 500 | 17,4 | 8,7 |
| 700 | 18,2 | 12,7 |

see packaging or fixture label for maximum current

2

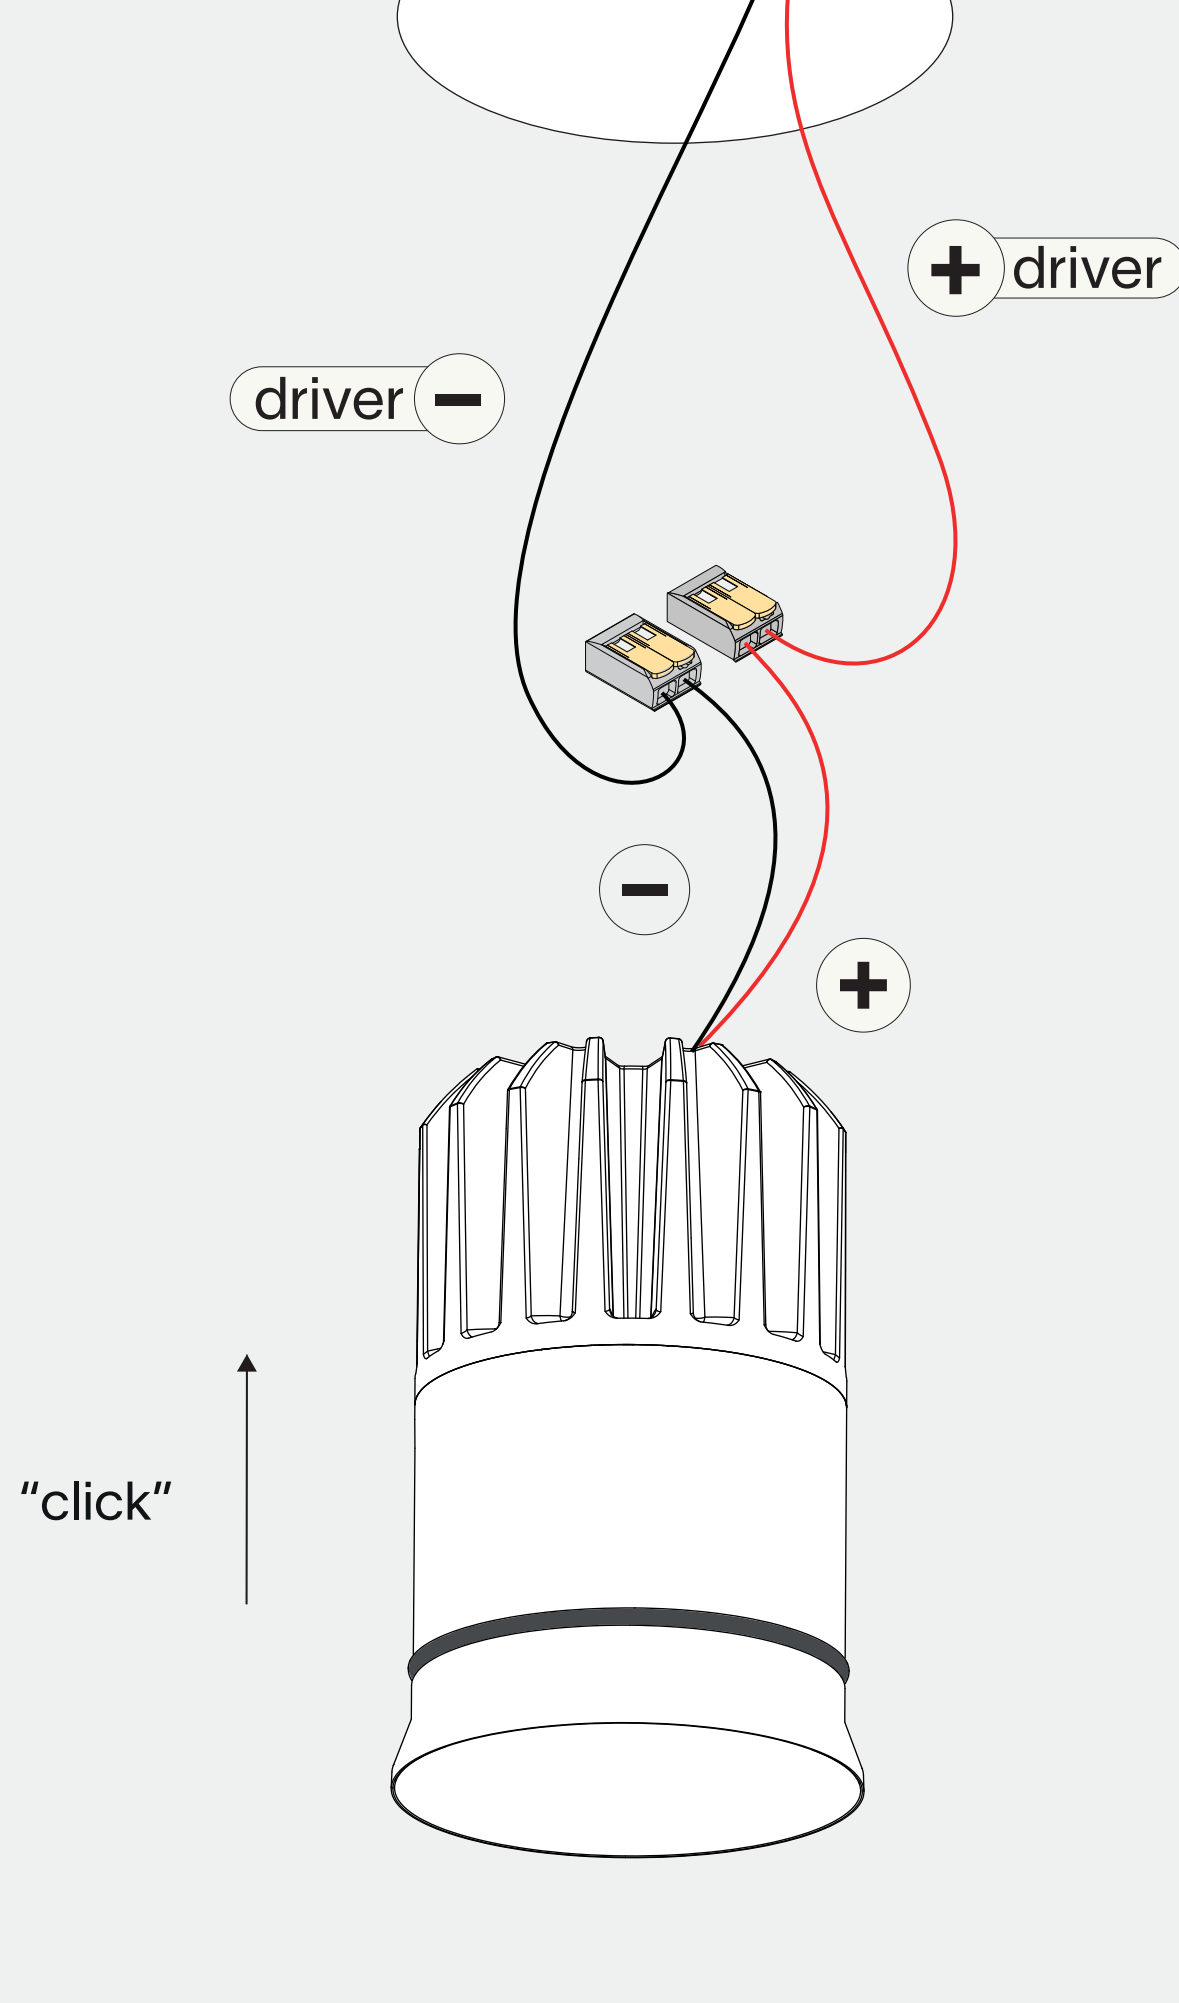


connect the wires with wago connectors for serial connection, respect polarity combine with a prado LED-driver

3




POWER ON

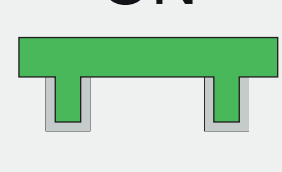


turn the power back on

4

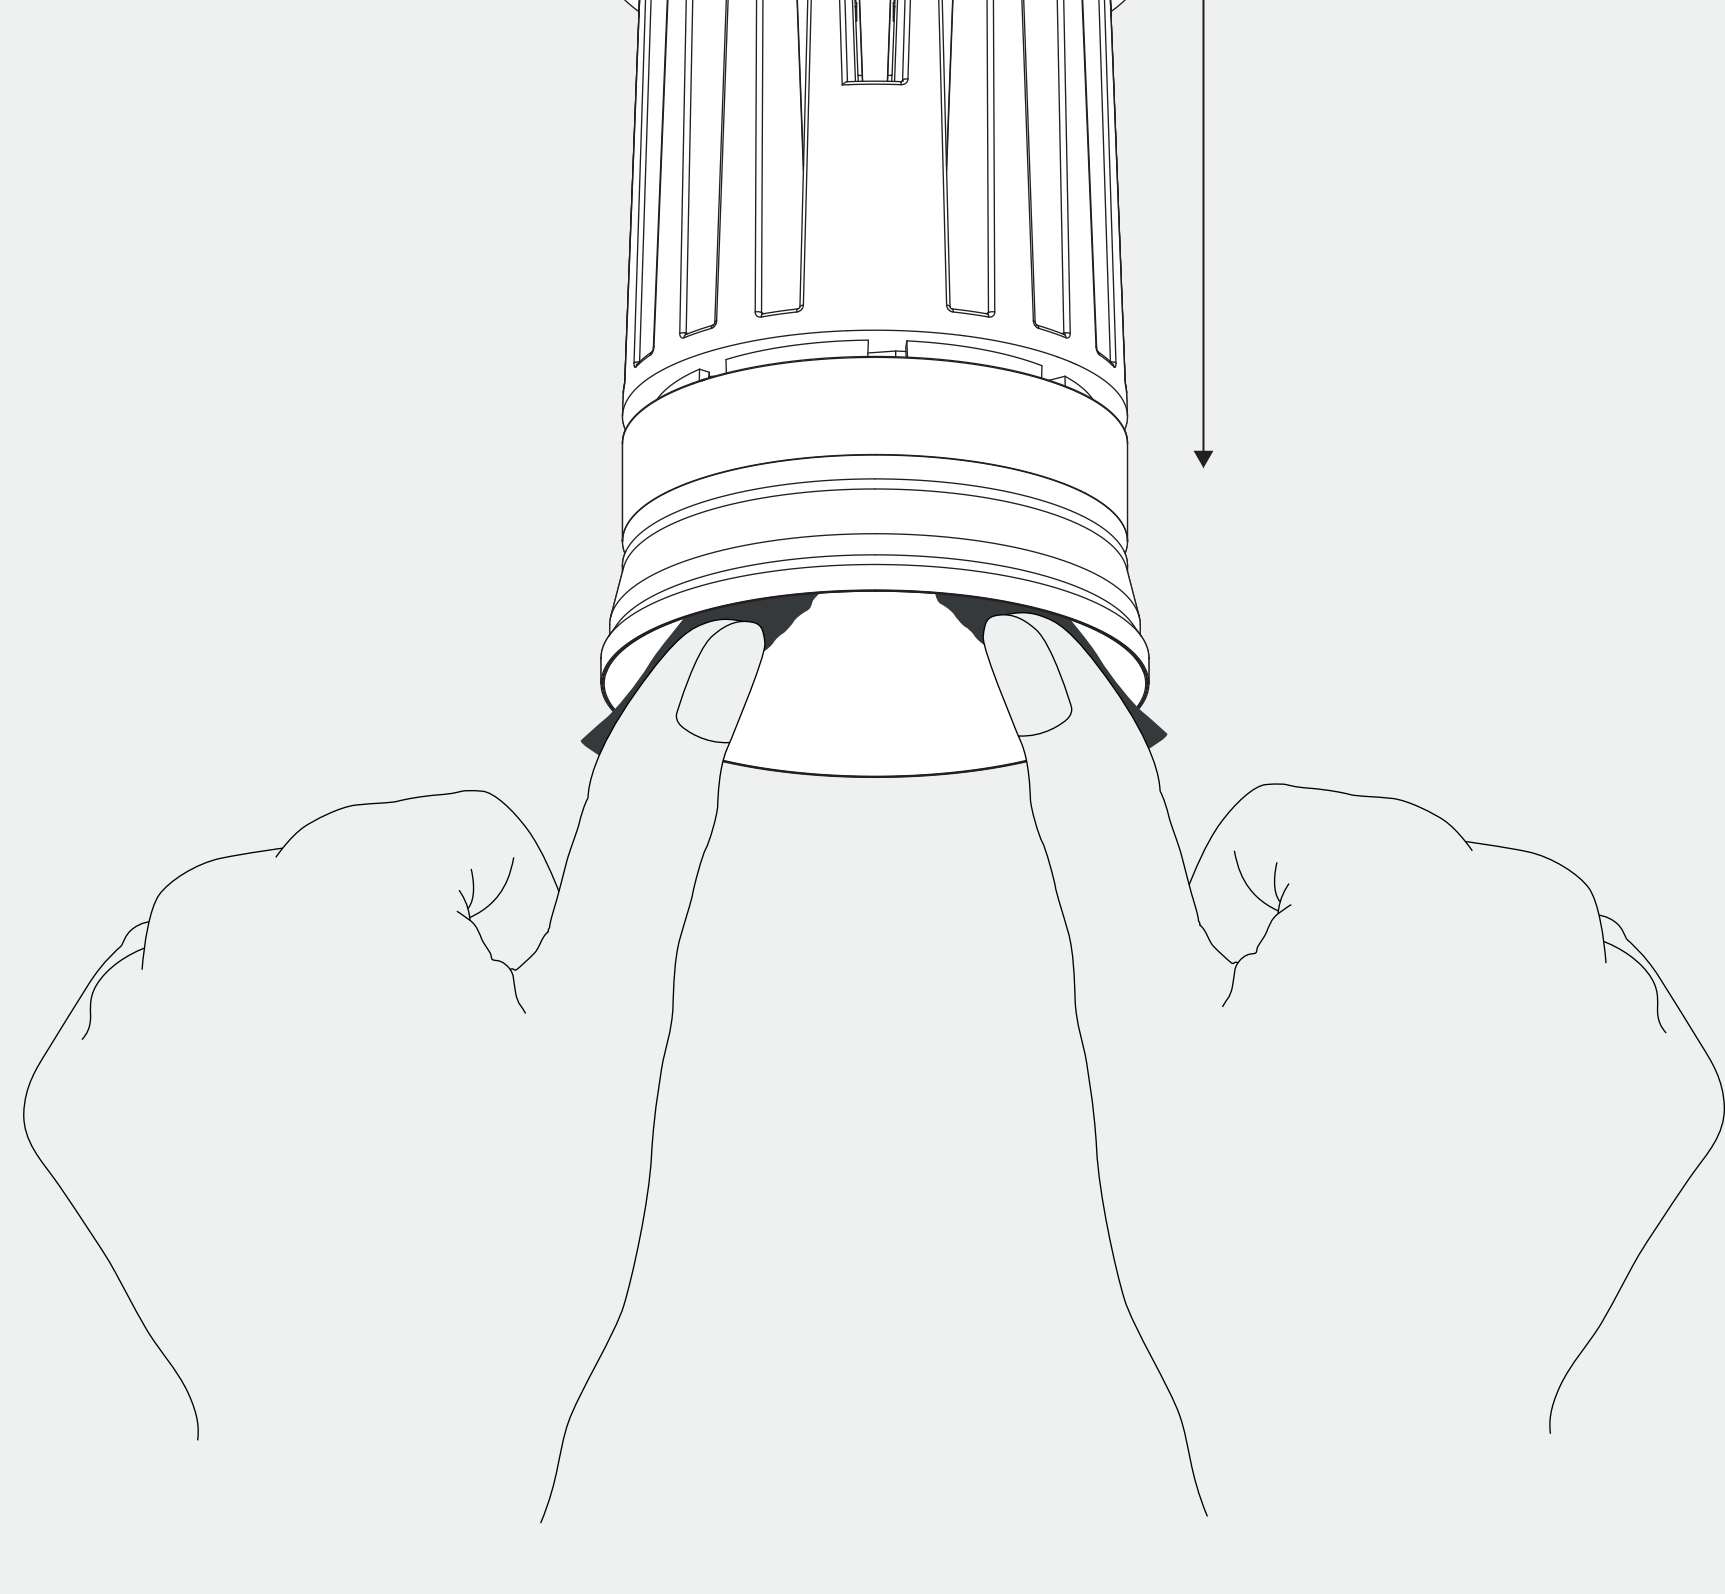


in case maintenance would be needed, the luminaire can be removed from the plaster ring without doing any damage by using duct tape

recommended free air dimensions

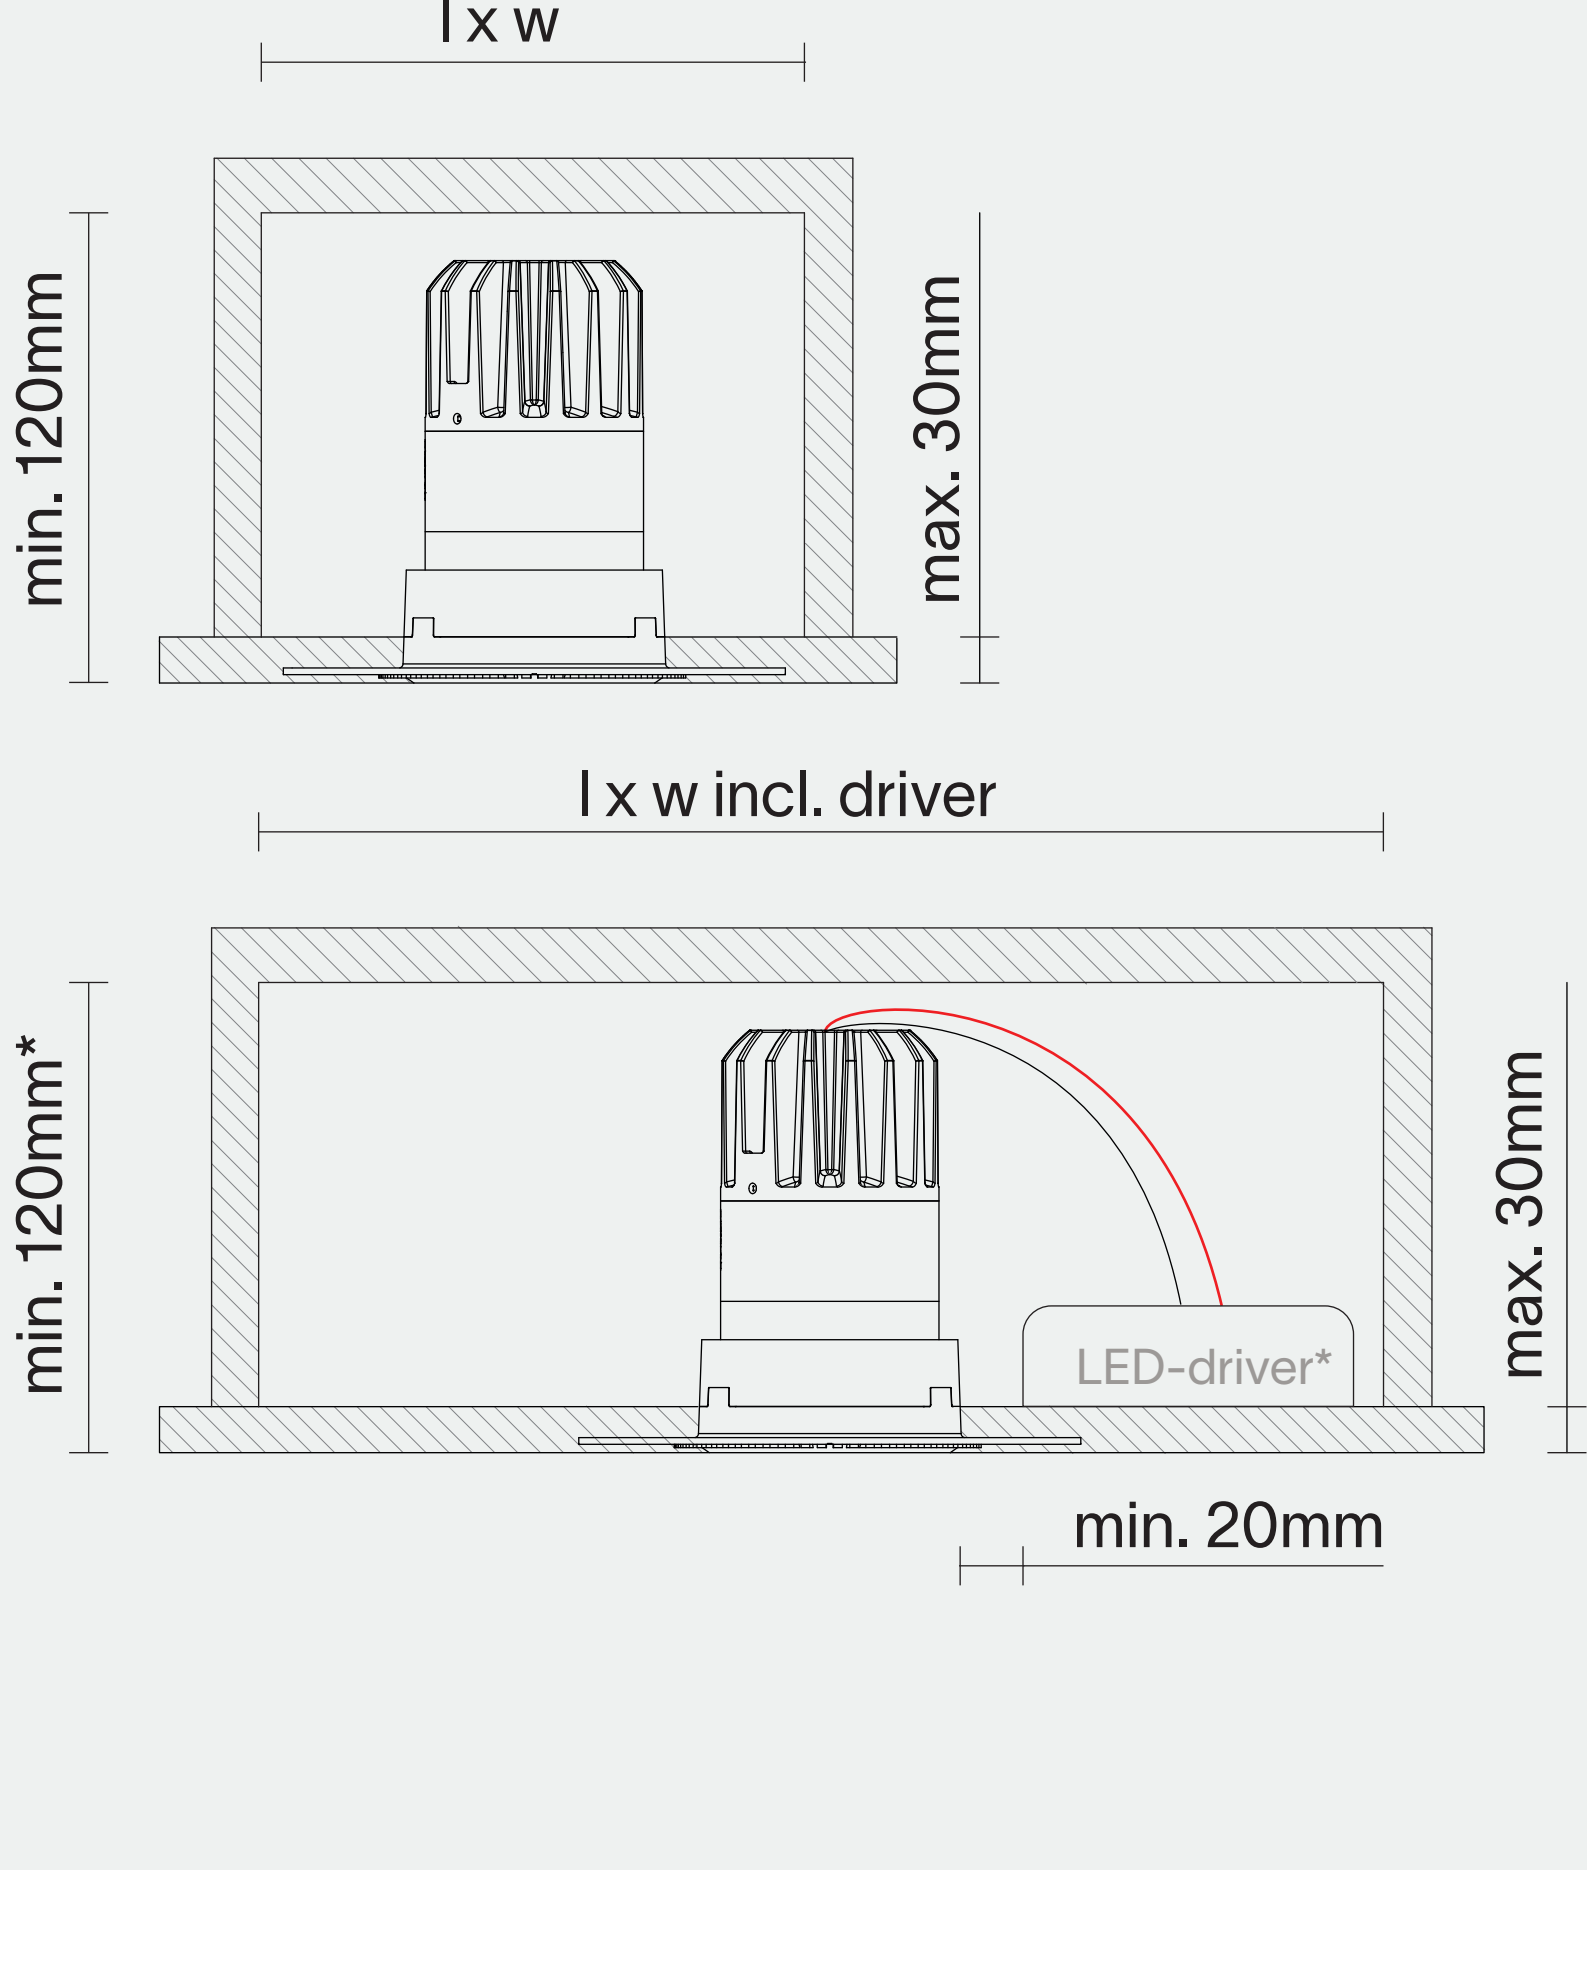

| constant current (mA) | I x W (mm) | I x W incl. driver (mm) |
|-----------------------|------------|-------------------------|
| 500 | 100 x 100 | 200 x 200 |
| 700 | 200 x 200 | 250 x 250 |

thank you for choosing prado

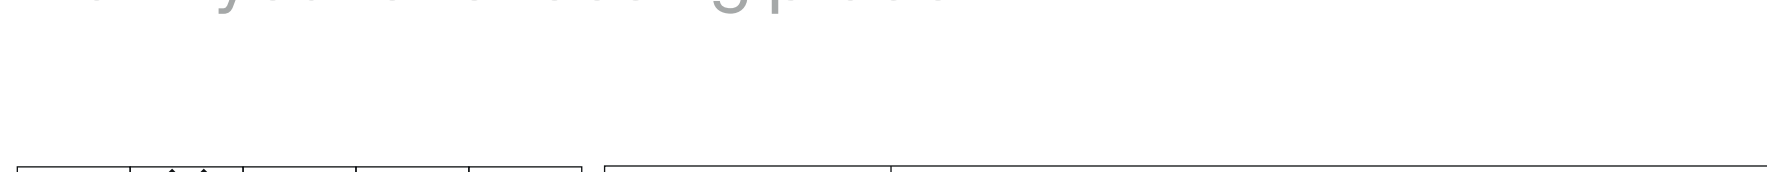

Replace glass lens when broken. Luminaire shall only be used together with glass lens.