




invisible E27 installation instruction

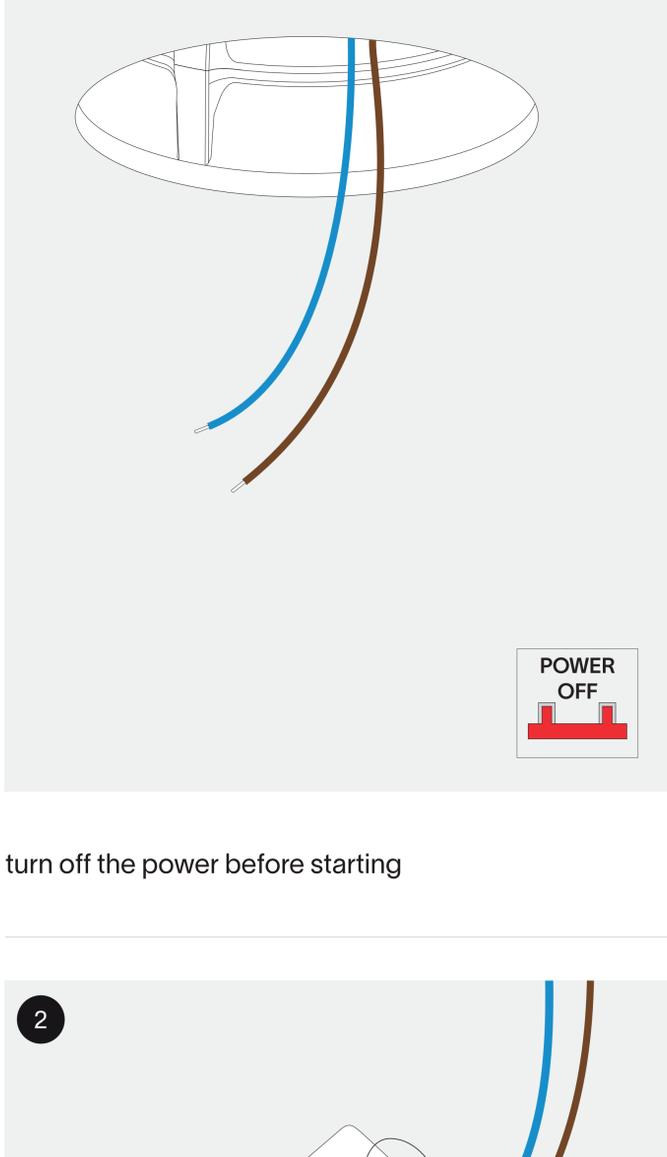


turn off the power before starting

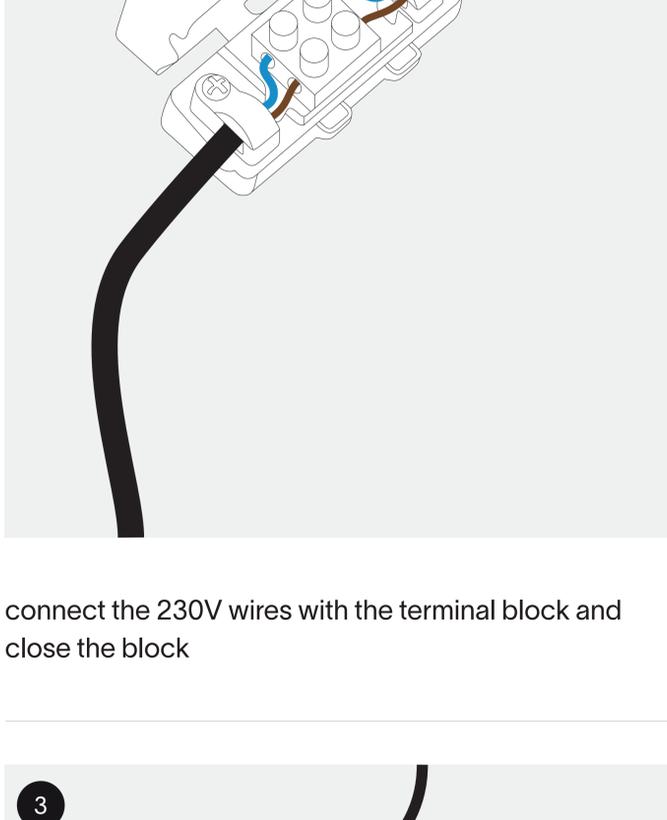

connect the 230V wires with the terminal block and close the block

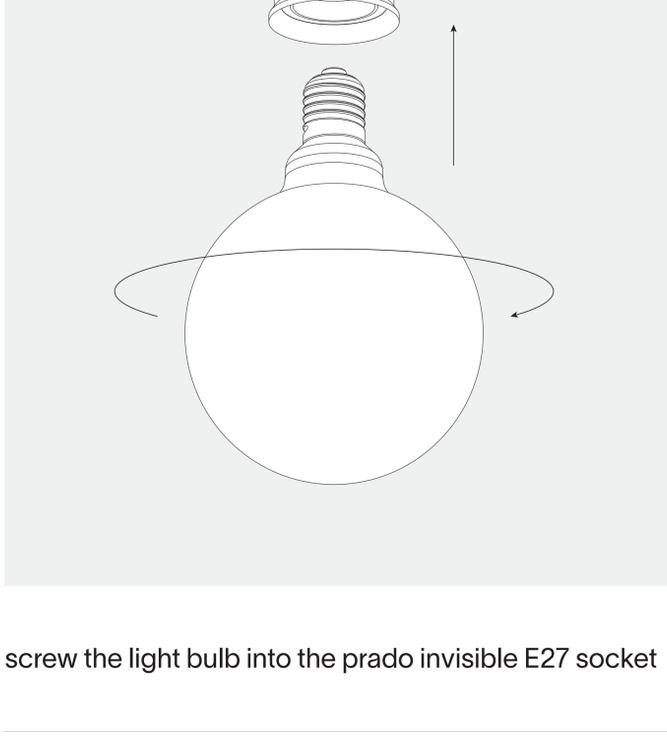


screw the light bulb into the prado invisible E27 socket

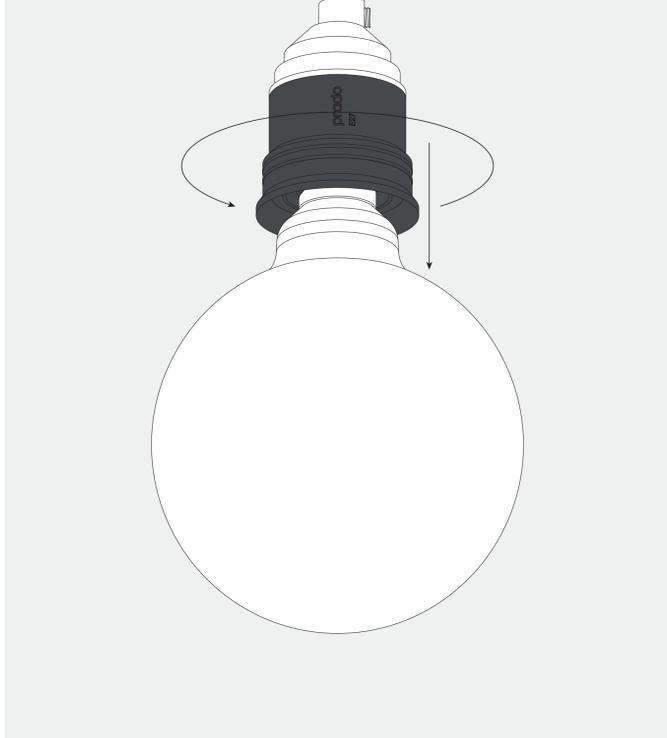


gently screw the first ring towards the light bulb



lock the first ring with the second ring

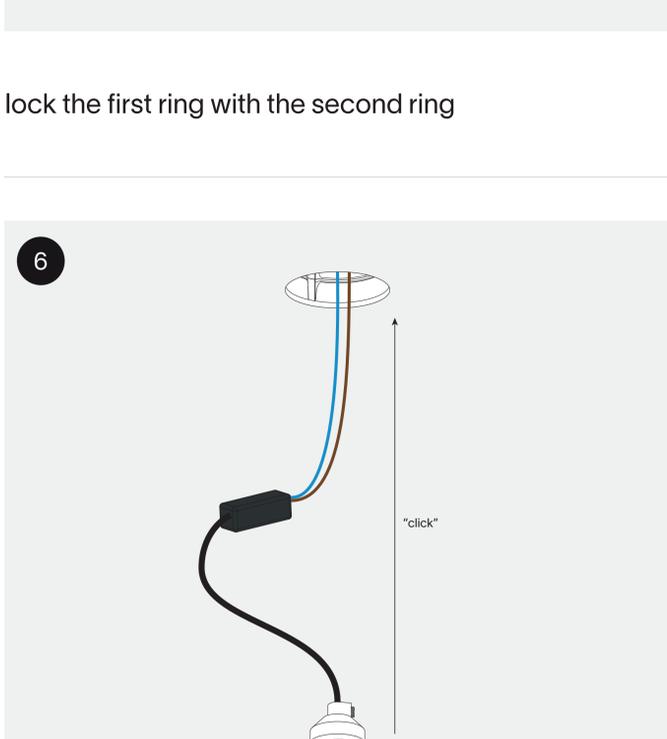

click the luminaire into the plaster ring

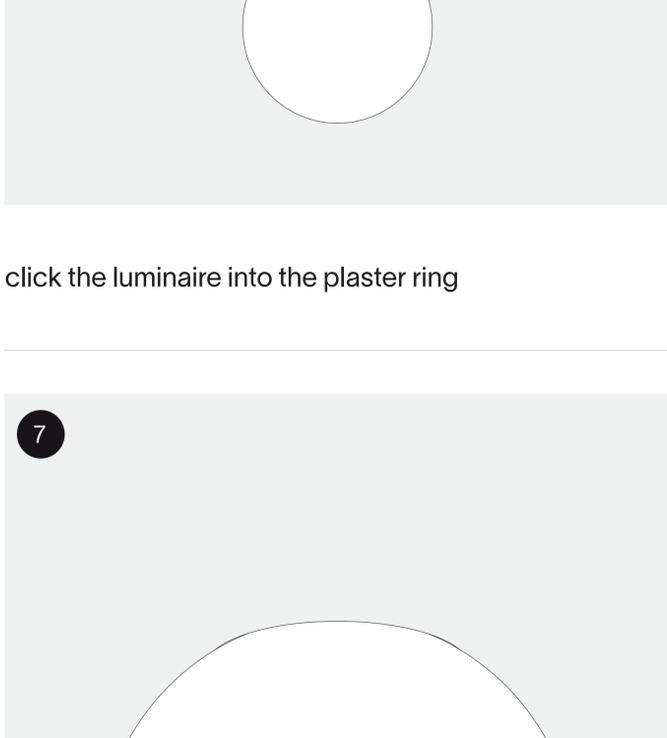

turn power back on
thank you for choosing prado

